

OPW 201F-1085 EMERGENCY VENT

The OPW 201 Emergency Vent line is designed to prevent an Above Ground Storage Tank (AST) from becoming over pressurized. When an AST builds up pressure the cast iron lid is forced up off its seat, allowing the pressure to be vented off. The shaft/bolt guides the movement of the lid. When pressure is relieved, the lid lowers back to its seat and the vent is reset.


Read all installation instructions completely and carefully prior to starting.

CAUTION: If the lid is in the open position and closes while any body part is between the lid and the body (seat), serious injury will occur.

INSTRUCTIONS:

1. Place the flange gasket (OPW part # H14293M or similar) on the tanks existing flange. Make sure the flange gasket does not obstruct the mounting holes on the flange.
2. Mount the 201F-1085 to the tank flange using $\frac{3}{4}$ " (minimum) dia. bolts (not included). Secure the 201F to the flange with equal torque applied to all the bolts. **CAUTION: DO NOT OVER TIGHTEN THE BOLTS EXCESSIVELY.** This may distort the vent flange causing the lid to seat improperly.
3. Check to be sure the lid raises and lowers once installation has been complete. Make sure the o-ring is completed located in the groove in the base of the vent flange.

Periodic maintenance is suggested for all OPW 201 Vents. The o-ring should be inspected and the lid should be raised and lowered once a year to assure no binding or obstruction.

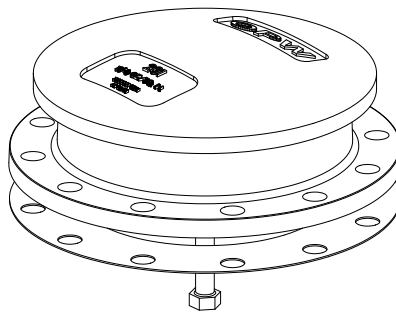

Product Warranty

All OPW parts and products are thoroughly inspected and tested from the time raw material is received at our plant until the product is completed. We guarantee all products are free from defects in materials and workmanship for a period of one year from the date of purchase. Any products that may prove defective within that one year period will, at OPW's option, be promptly repaired or replaced or credit given for future orders. This warranty shall not apply to any product which has been altered in any way, which has been repaired by any party other than an authorized OPW service representative or when such failure is due to misuse or conditions of use. OPW shall have no liability for special or consequential damages to any party, and shall have no amount of the invoice for the products.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, AND SPECIFICALLY THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE FACE HEREOF.

WARNING: OPW products should be used in compliance with applicable federal, state and local laws and regulations. Product selection should be based on physical specifications and limitations and compatibility with the environment and material to be handled. OPW reserves the right to change specifications at any time without incurring obligations.

OPW Fueling Components
9393 Princeton-Glendale Road
P.O. Box 405003
Cincinnati, Ohio 45240-5003
(513) 870-3100 (800) 422-2525

Quality Statement
OPW Fueling Components will provide defect-free products and services meeting the requirements of our customers and each other