



OPW 61-S0K Float Replacement Kit

Note: This is for use only with the OPW 61-S0 Overfill Prevention Valve with two-piece float bracket.

Step 1


Remove cotter pin from float bracket pin that attaches the float to the pivot-bracket.

Warning: Do not remove pivot-bracket pin. If upper pin is removed, valve will not function properly and a spill may result. Valve must be returned to factory and rebuilt or replaced. Removal of this pin voids warranty.

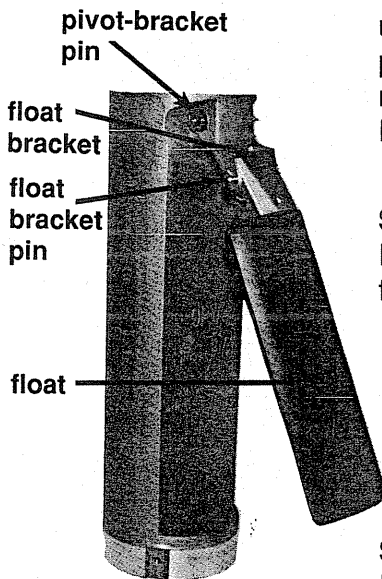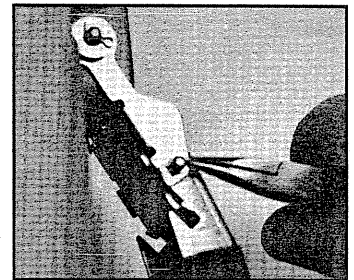


Step 2

Remove float bracket pin and discard damaged float.

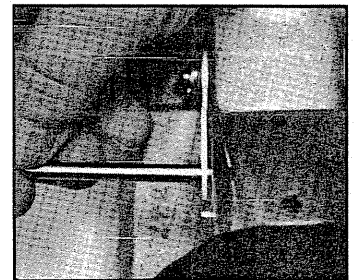


Step 3

Position float between bracket arms, align holes and slide new float bracket pin through the holes in bracket and float.

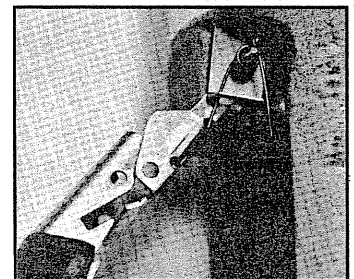

Step 4

Secure float bracket pin in position and secure with two cotter pins supplied.

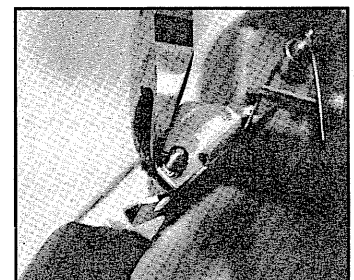

OPW® FUELING COMPONENTS

A DOVER COMPANY

P.O. Box 405003 • Cincinnati, Ohio 45240-5003
Telephone: (513) 870-3219 • (800) 422-2525