

Testing Instructions Double Wall Fiberglass Dispenser Sumps

IMPORTANT: Please read all warnings and follow the use instructions completely and carefully. Failure to do so will void all warranties and may cause product failure, or result in environmental contamination due to liquid leakage into the soil, creating hazardous spill conditions.

WARNING - DANGER: Using electrically operated equipment near gasoline or gasoline vapors may result in fire or explosion, causing personal injury and property damage. Be sure that the working area is free from such hazards, and always use proper precautions.

DOUBLE WALL TESTING

After completion of the integrity test, you may test the sump under pressure, vacuum or liquid. For pressure, apply up to 2 psi to the test port(s) installed within the sump body interstitial space. Under vacuum, the sump may be tested to a minimum of 15" and a maximum of full vacuum at 29.95". Always follow all local regulations and restrictions. **PLEASE NOTE: U. L. Listed DMA sumps require a listed, approved, electronic monitor/alarm system to be installed for operator notification in the event of product leakage into sump area.**

ADDITIONAL TESTING REQUIREMENTS – STATE OF FLORIDA ONLY:

Leak Test Requirement: 1) a. Fill entire sump within 4 to 6 inches of top. b. Observe water level for a minimum of 3 hours. c. Water level shall not decrease more than allowable for normal evaporation. 2) a. Fill interstitial space of sump within 4 to 6 inches of top. b. Observe water level. c. Water level shall not decrease more than allowable for normal evaporation. Interstitial space shall be tested by vacuum (5 bars) or pressure (2 psi) for a minimum of 10 minutes.

Notice: FlexWorks products must be used in compliance with applicable federal, state, and local laws and regulations. Product selection should be based on physical specifications and limitations and compatibility with the environment and material to be handled. OPW makes no warranty of fitness for a particular use. All illustrations and specifications in this literature are based on the latest production information available at the time of publication. Prices, materials, and specifications are subject to change at any time, and models may be discontinued at any time, in either case, without notice or obligation.

Product Warranty

OPW warrants that products sold by it are free from defects in materials and workmanship for a period of one year from the date of shipment by OPW. As the exclusive remedy under this limited warranty, FlexWorks by OPW, Inc., will at its sole discretion, repair, replace, or issue credit for future orders for any product that may prove defective within the one year period. This warranty shall not apply to any product that has been altered in any way, which has been repaired by any party other than a service representative authorized by OPW or when failure is due to misuse, conditions of use, or improper installation or maintenance. Neither OPW Fueling Containment Systems nor OPW shall in any instance have any liability whatsoever for special, incidental or consequential damages to any party and shall have no liability for the cost of labor, freight, excavation, clean up, downtime, removal, reinstallation, loss of profit, or any other cost or charges in excess of the amount of the original invoice for the products.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, AND SPECIFICALLY THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF.