


Lifter Assister B-311

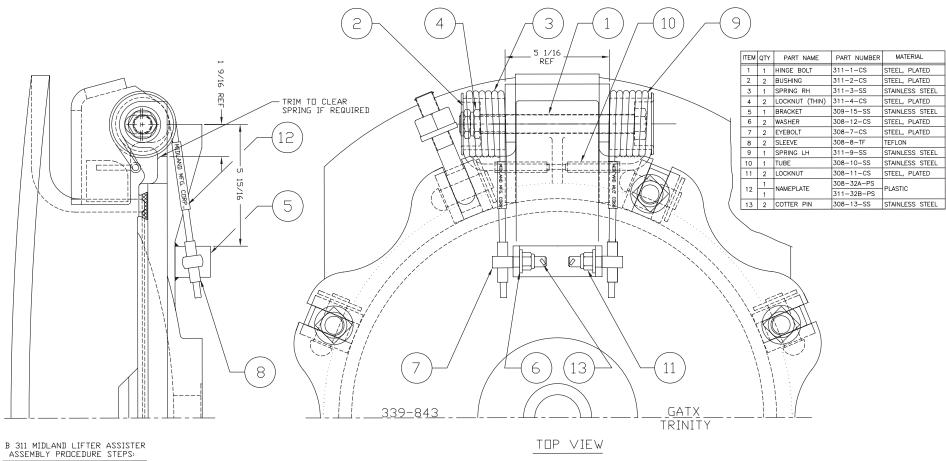

1. CLOSE COVER.

2. TRIM COVER EDGES AS SHOWN.

3. WELD BRACKET #5 TO COVER. 4. REMOVE EXISTING PIN ASSEMBLY.

5. ASSEMBLE BUSHING #2, LH SPRING #9 ON HINGE BOLT #1 & INSERT BOLT THRU HINGE.

6. INSTALL TUBE #10, RH SPRING #3 (WITH END INTO TUBE), BUSHING #2 & LOCKNUT #4. LEAVE LOCKNUT 1/2 TURN LOOSE. INSTALL LOCK NUT #14.
7. OPEN COVER TO FULL OPEN POSITION AGAINST STOP.

8. SLIP SLEEVE #8 & EYEBOLT #7 ON EACH SPRING END & INSTALL EYEBOLT INTO DRILLED HOLE, ADD NUT

#11 & COTTER PIN #13. 9. CLOSE & OPEN COVER TO TEST OPERATION.

Revision 5.0 12/16/2014