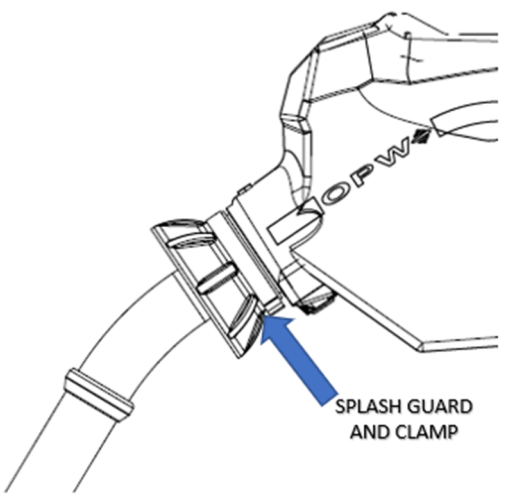
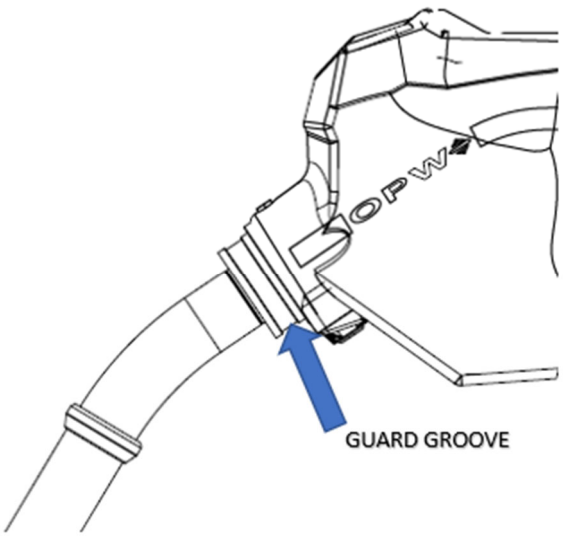



## OPW SPLASH GUARD (14C) INSTRUCTIONS

If the splash guard on your 14C OPW nozzle has been damaged or requires replacement, please use the following procedure for proper removal and replacement.

<p><b>STEP 1</b></p>	<p>1. Remove the splash guard by cutting the clamp with aviation snips or other non-sparking tools.</p>	
<p><b>STEP 2</b></p>	<p>2. Clean the nozzle splash guard groove of any debris.</p>	

STEP 3

3. Place the new clamp over the new splash guard and slide them together over the spout and over the groove lip.

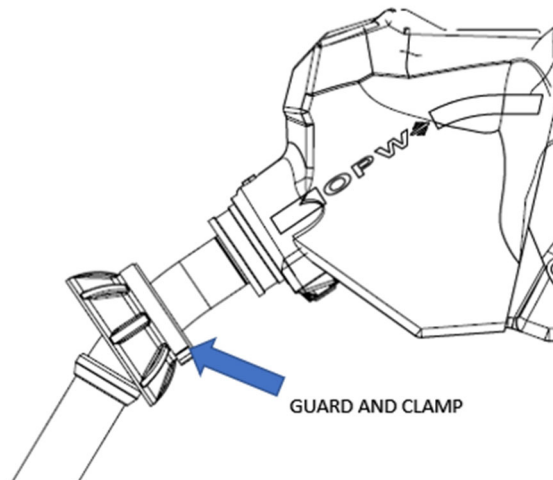

STEP 4

4. Orient the clamp with the ears to the bottom of the nozzle and with the splash guard pushed against the nozzle body. Using jaw pliers, crimp the clamp securely in place.

