

# WARNING

H-10101-PA  
SEPT., 1987  
REV. APRIL 2002

## DO NOT USE FULL SERVICE NOZZLES WITH A HOLD-OPEN DEVICE ON PRE-PAY SELF-SERVICE INSTALLATIONS.\*

The danger exists of flowing gasoline on yourself or others which can result in a fire with serious personal injury or property damage. This hazardous condition occurs if a customer replaces the nozzle in the pedestal rack with the hold-open device engaged after the pump mechanism has shut off flow. The nozzle is latched open and flow will begin when the next customer turns on the pump switch. For proper instructions of how to remove hold-open latch see reverse side.

**NOTICE TO INSTALLER:** This warning card should be given to the station operator or attendant.


\* **PLEASE NOTE:** The OPW 11-B and 7-HB Nozzles are specially designed for pre-pay, self-service application. It is designed to close automatically when the pump is turned off, and cannot be re-opened until the pump is turned on, and the hose pressurized. Contact your OPW Distributor for ordering information.

**WARNING: DO NOT** use full service nozzles with a hold-open device on PRE-PAY self-service installations. The danger exists of flowing gasoline on yourself or others which can result in a fire with serious personal injury or property damage. This hazardous condition occurs if a customer replaces the nozzle in the pedestal rack with the hold-open device engaged after the pump mechanism has shut off flow. The nozzle is latched open and flow will begin when the next customer turns on the pump.

**NOTE:** To convert an OPW nozzle with a hold-open latch to an OPW nozzle without a hold-open latch.

### FOR OPW NOZZLES

1. Turn off electrical power and drain the nozzle into a suitable container.
2. Place the nozzle on a flat surface, hold lever in open position and insert a flat-bladed screw driver along side the hold-open rack and pry the rack upward and off the rivets. CAUTION: Protect your face and other exposed body parts — wear safety glasses.
3. Make sure that broken rivets are removed from the guard. Throw old parts away.
4. Do not try to remove the trigger. This is not necessary and is more difficult.

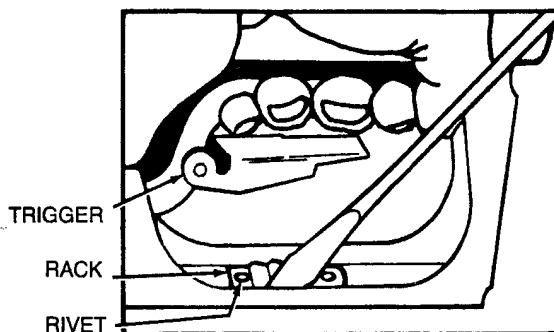

### FOR ALTERNATE OPW METHOD

1. Remove nozzle, drain and take to a safe location.
2. Grind off rivet heads. CAUTION: Protect eyes and face during grinding operation.

**OPW**   
A DOVER COMPANY

P.O. Box 405003 - Cincinnati, Ohio 45240-5003  
(513) 870-3219 - (800) 422-2525 (orders only)  
(513) 870-3100 (other calls)