Opw instructions

OPW 66-S Breakaway Scuff Guard Installation Instructions



FOR BEST RESULTS, INSTALL THE OPW 66-S AT A TEMPERATURE ABOVE 50°F.

Step 1

If the OPW 66V Breakaway Connector is already installed in a hose assembly, carefully remove it by unscrewing the hose ends (see Figure 1). Drain excess fuel into a container.

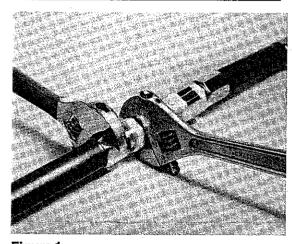


Figure 1

Step 2

Use a rotating motion and push each scuff guard half onto a hose end (see Figure 2).

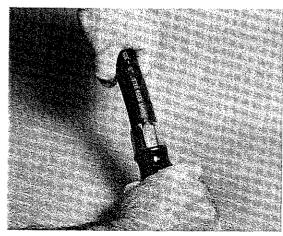


Figure 2