

# 1-2200 Series Replaceable Single-Wall Spill Container



- ◆ Designed for proposed 2014 EPA Regulations and beyond
- ◆ Prepares you for future compliance
- ◆ Innovative Snowplow Ring-less, Liquid-Tight Cover
- ◆ Easy access for overfill prevention valve testing and inspection
- ◆ Replaceable bucket without breaking concrete

## FEATURES:

- Flange Adaptor allows easy removal of fill/vapor adaptor and access to the drop tube and overfill valve
- Innovative Snowplow Ring-less, Liquid-Tight Cover Design with Integrated Lift Handle
- Removable Bellows and Ring



# The NEW 1-2200 Series Replaceable Single-Wall Spill Container

## Replace Bellows in 3 Easy Steps



1 Remove Upper Bolts and Ring



2 Remove Lower Bolts and Ring and Remove Bellows



3 Replace Bellows, Reinstall Upper and Lower Rings

No Need to Remove Base in order to Replace Bellows

## Ordering Specifications

### 1-2200 Series Spill Container Models

Part Number	Description
1C-2200D	Single-Wall, Field Replaceable Spill Container with Drain Valve
1C-2200P	Single-Wall, Field Replaceable Spill Container with Drain Plug
1-3100-TOOL	Installation Tool, Used for Edge and 1-2200 Spill Containers



## Liquid-Tight Cover

Special Cover and Ring Design  
Seals Out Water and Debris

Eliminates Need for  
Snow Plow Ring –  
Flush with Finish Grade

Proven "Bubble Seal"

Removable Compression Ring

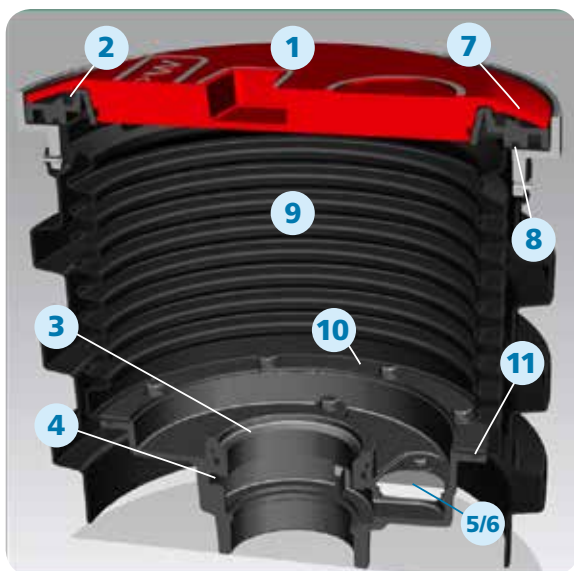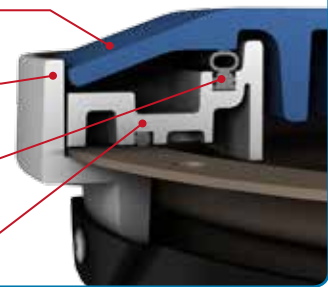

### 1-2200 Series Replacement Parts

	Part/Kit Number	Description
1	207235	Cover
2	H12229M	Cover Seal
3	201739	Flange Adapter
4	201692	Flange Adapter O-Ring
5	1DK-2100-EVR	Drain valve sub assembly
6	1DP-2100	Drain Plug Kit
7	208951	Upper Ring Replacement Kit (includes; o-ring and hardware)
8	207243	Upper Ring O-Ring
9	208952	Bellows Replacement Kit (includes; o-rings, split rings, and hardware)
10	207212	Lower Split Ring, Each (2 required per spill container)
11	207211	Lower Bellows O-ring
	208197	Installation Instructions