



Excess Flow Check Valves


A-162 Installation, Operation, & Maintenance Instructions

CAUTION: IMPORTANT SAFEGUARDS

Midland valves are used in connection with a variety of products, many of which are hazardous materials and could cause serious injury or damage. Always use extreme caution and proper equipment when involved with hazardous materials. The valve should only be handled by qualified personnel. Read these instructions carefully before proceeding.

SAVE THESE INSTRUCTIONS!

Rev 1
July 2, 2025

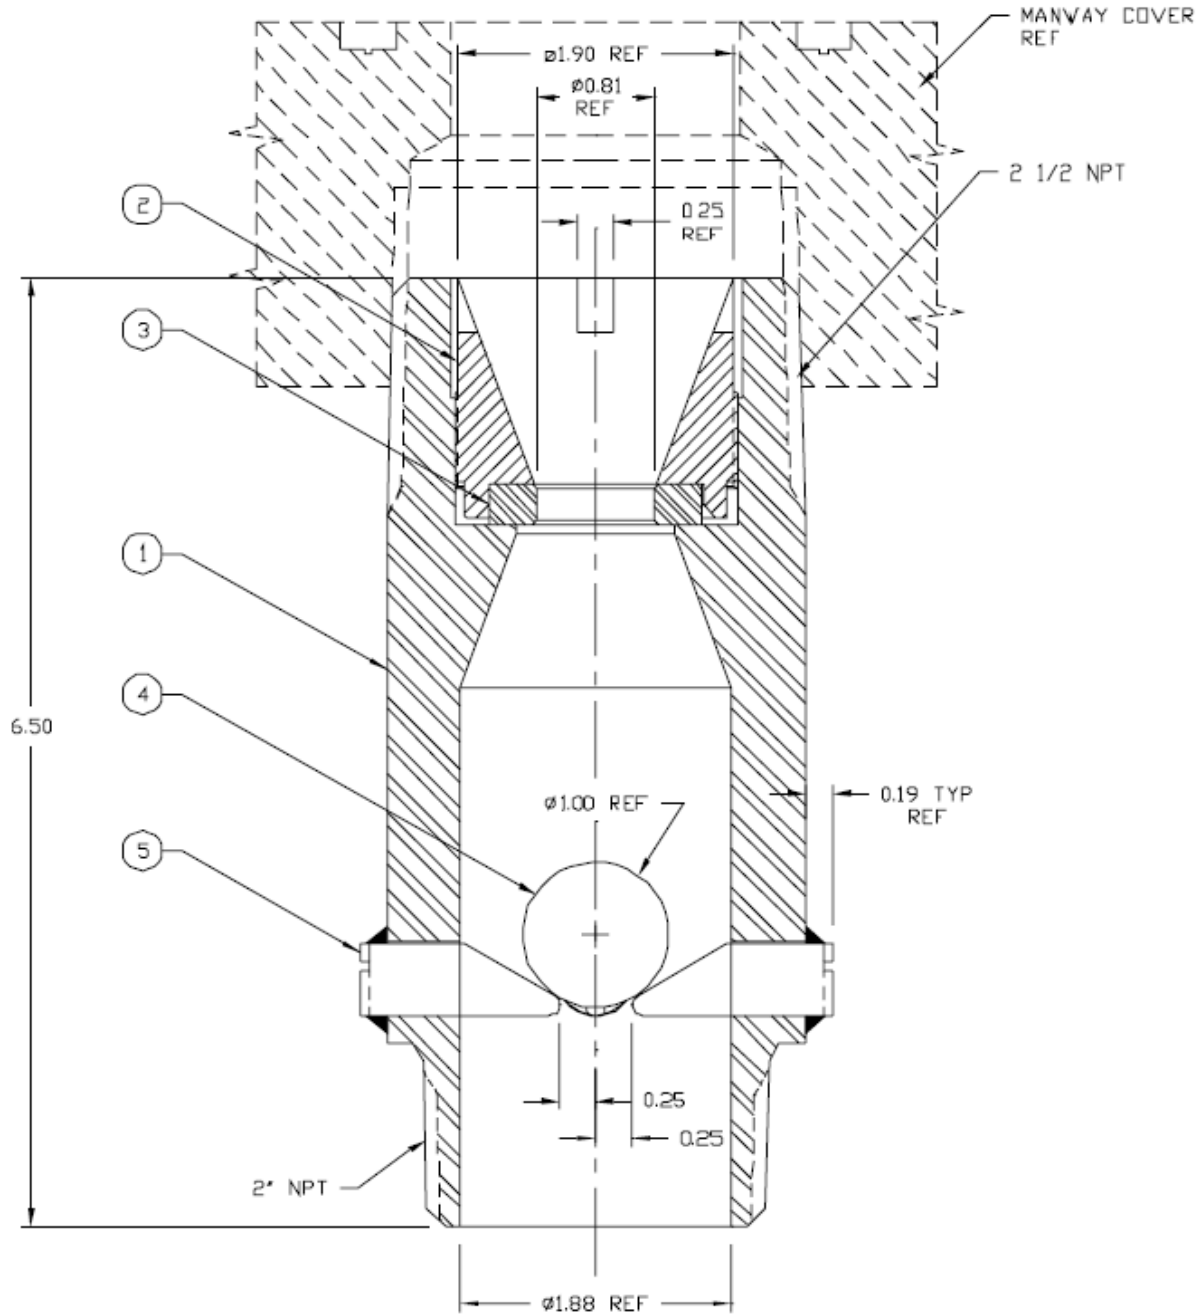

ITEM NO.	QTY.	PART NAME	A-162	
			MATERIAL	PART NO.
1	1	BODY ASSEMBLY	MONEL	162-1-ML
2	1	SEAT HOLDER	MONEL	162-2-ML
3	1	SEAT	MONEL K 500	162-3-ML
4	1	BALL	CARBOLOY	162-4-TC

Function

It should be fully understood by all users of the restricted usefulness and purpose of excess flow check valves (abbreviated as EFCV). They can be relied upon to close only when the outward flow through the valve exceeds a predetermined amount of product.

WARNING: Valve Misuse EFCV valves are not to be used to protect against product loss during loading or unloading in the event of a line rupture.

Valves designed for line rupture protection are available. These valves provide manual, remote, and thermally activated shut off capability. All operating personnel should be alerted to this limitation of EFCV. In railroad tank car operation, EFCV serve only to protect the tank in the event the exterior valves are compromised.

Operation

1. As stated in the preceding paragraph, the EFCV has a flow rated capacity (subject to a variation or tolerance due to many factors). Most EFCV are equipped with a bypass, so that product will still flow through the valve when it has checked. The bypass is designed into the valve to permit pressure to equalize above and below the float when the valve downstream is closed off, thus enabling the float of the EFCV to unseat. Therefore, it is never safe to remove a valve directly above an EFCV, unless some flow of discharging product can be safely handled.

2. In a derailment accident, where tank cars are rolled over, the gravity actuated float in the EFVC will probably close below the rated capacity of the EFCV because the flow rate capacity is established when the valve is vertical and flow is upward.

Installation

NOTE: Conform to all regulations and your company's installation instructions. It is not the intention of this pamphlet to conflict with or supersede these requirements.

1. Be sure the ball will slide freely up and down in the valve body. If the ball had been taken out of the valve, inspect it to see that there are no burrs, nicks or gouges on the exterior surfaces that could restrict the free movement of the ball.
3. When welding the valve into its mounting, be careful not to get weldatter on the inside of the valve body. Also, do not permit the valve body to become distorted when welding it in place.
4. If the valve has a removable seat, the valve seat should be tightened down so that it does not become disengaged in transit. Tighten the seat down securely. Midland has a wrench available to tighten down the seat.

Maintenance

1. Remove the seat holder from the body. The Midland B-310-CS may be used to assist in this operation.
2. Remove the ball.
3. Body inspection
 - a. Clean the interior of the body and
 - b. Clean the threads.
 - c. Check the 2 1/2" NPT body threads.
 1. Ensure the threads are full and not worn or damaged.
 2. Check with a 2 1/2" NPT ring gauge
 - d. Check the 2" NPT body threads.
 1. Ensure the threads are full and not worn or damaged.
 2. Check with a 2" NPT ring gauge
 - e. Perform a visual inspection on the interior threads of the body. Ensure the threads are full and not worn or damaged.

If the body does not meet one of the above criteria, replace it with a new valve.

3. Seat

- a. Inspect the seat for damage and chatter.

If there is any damage or chatter, replace it with new.

4. Ball

- a. The ball should move freely in the body.
 - 1. The ball surface should be smooth.
 - 2. Weigh the ball. The ball should weigh a minimum of 120 Grams.

If the ball does not meet the above criteria, replace it with new.

5. Seat Holder

- a. Perform a visual inspection on the seating surface. The surface should be smooth.

If the Seat Holder does not meet the above criteria, replace it with new.

If the ball does not meet the above criteria, replace it with new.

Assembly

- a. Preparation
 - 1. Apply lubricant with PFPE (perfluoropolyether) grease (examples include, but not limited to Krytox GLP204, Fluorolube GR-290) to the seat holder. Apply an additional 2 wraps of Teflon tape.
- b. Hold the body upside down, with the 2 ½” threads down. the coupling end of the body, wrap the 2 ½” NPT threads with Teflon. Minimum 2 wraps.
- c. Place the seat in the seat holder.
- d. Place the ball on the hole in the seat holder.
- e. Screw the seat holder into the body.
- f. Tighten the seat holder. Tool tight. The Midland T-310-CS wrench may be used to assist with this operation.

- g. Assembly complete.

NOTICES AND WARRANTY

Midland Excess Flow Check Valves are used in a variety of products, many of which are hazardous materials. The acceptance and transportation of the products are regulated by the DOT and AAR in the U.S.A., and in Canada by the CTC and Transport Canada, as well as other governmental bodies, particularly when used in stationary applications. All personnel should be familiar with and follow these regulations. Nothing in this pamphlet is intended to conflict with or supersede these regulations.

Obtaining Product Drawings

Assembly drawings of Midland Excess Flow Check Valves are available at no charge and will be mailed upon request. Address any questions concerning valve maintenance or usage to the Engineering Dept., Midland Manufacturing Corp. The information contained herein is thought to be reliable. It was gathered from knowledgeable sources, but Midland Manufacturing Corp. makes no representations or guarantees about its accuracy or completeness and assumes no liability for this information.

Warranty

Midland warrants the products of its own manufacture to be free of defects in material and workmanship, for a period of 1 year from the date of the invoice. Furnished materials and accessories purchased from other manufacturers are warranted only by and to the extent of those manufacturers' warranties, if any.

MIDLAND MAKES NO WARRANTY OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, OTHER THAN AS SPECIFICALLY STATED HERE. MIDLAND MAKES NO WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE OR USE. Midland's obligation under this warranty is strictly limited, at its option, to 1) repair or replacement at its factory of a like quantity of product: 2) refunding to purchaser money paid to Midland for its product: or 3) issuance of written authorization for the Purchaser to repair or replace, at costs comparable to Midland's normal manufacturing costs those parts proven defective, provided that Purchaser has given to Midland immediate notice upon discovery of such defect. Merchandise claimed to be defective shall not be returned without first obtaining Midland's written consent. The undertaking of repair or replacement by the

Rev 1
July 2, 2025

Purchaser, or its agents, without Midland's written consent, shall void Midland's warranty and relieve Midland of all responsibility. Under no circumstances shall Midland be liable for any direct, incidental, consequential or other damage of any kind in connection with the installation, operation, maintenance, repair, inspection or other use of any product purchased from it.



Mail to: P.O Box 226, Skokie, IL 60076-0226

7733 Gross Point Road, Skokie, IL 60077

Phone: 847-677-0333

<https://www.opwglobal.com/midland>