

ProGauge MagLink LX 4 and LX Plus Operator Manual

Part Number: M2052

Revision: 5



MagLink LX 4 and LX Plus

DFS *Worldwide Brands*



IMPORTANT: Before you use this manual, make sure you have the most recent revision. Look at the revision of this document to make sure it agrees with the most current revision found in the FMS Technical Library. Download the latest revision if necessary.



IMPORTANT: If you have an installation in an area that has possible internet connectivity issues, it is recommended to either print or download these manuals to a mobile device (mobile phone, tablet or iPad) before you go to the installation site.



READ CAREFULLY: OPW Fuel Management Systems and Dover Fueling Solutions cannot be held responsible for installations, configurations or use of its products that does not comply with the most recent documentation available.



NOTE: It will be necessary to have Single Sign-On (SSO) credentials to get access to manuals, instructions, software updates and other important assets. Speak with your FMS sales representative or contact FMS Customer Service at 1-888-679-3835 (1-888-OPW-FUEL) for information. Once you have been approved for SSO credentials go to the [FMS Technical Library](#) to find the most recent revisions of all manuals and instructions.



NOTE: All references to other manuals and instructions in this manual can be found in the FMS Technical Library. Make sure you have the most recent revision.

Related Manuals

Other related manuals necessary to install, configure, maintain or use this product:

[M2050 LX 4 Installation Manual](#)

[M2050-PLUS LX Plus Installation Manual](#)

[M2051 LX 4 and LX Plus Configuration Manual](#)

[M2052 LX 4 and LX Plus User Manual](#)

[M2054-QS LX 4 and LX Plus Quick Start](#)

[FMM2058-PLS LX Plus Wiring Diagram](#)

[FMM2058-PG LX Plus Wiring With ProGauge](#)



ProGauge is a part of Dover Fueling Solutions.

Contact

ProGauge

START ITALIANA S.r.l.

Via Natta 6

20823 Lentate Sul Seveso

MB, Italy

Tel. +39 0362 1581465

Fax +39 0362 1581464

Copyright Information

© 2023 Dover Fueling Solutions. All rights reserved. DOVER, the DOVER D Design, DOVER FUELING SOLUTIONS, and other trademarks referenced herein are trademarks of Delaware Capital Formation, Inc./Dover Corporation, Dover Fueling Solutions UK Ltd. and their affiliated entities.

Table of Contents

Section 1 Preface	6
Section 2 General Warnings	7
Section 3 Introduction	8
Section 4 General Description	10
4.1 Compatible Probes	12
4.2 Correct Use	13
4.3 Incorrect Use	13
Section 5 Power ON/OFF	14
Section 6 Product Labels	15
Section 7 Graphical User Interface	17
7.1 Inventory	17
7.1.1 Status Icons	19
7.2 Print/Email Current Inventory On Demand	22
7.3 Main Menu	22
7.4 Status Page	23
7.5 Calendar	24
7.6 Notifications	25
7.7 Leak Test	25
7.8 LLD (MagLink LX Plus Console Only)	26
7.8.1 Force STP Activation	27
7.8.2 Beta Calibration	28
7.9 History	29
7.10 Maintenance	30
7.11 Shifts	31
7.12 Reports	32

7.12.1 Sales Report	32
7.12.2 Reconciliation Report	33
7.12.2.1 Hourly Report	34
7.12.2.2 Daily Report	34
7.12.2.3 Petroleum Report	34
7.12.3 Delivery Report	35
7.12.4 Leak Report	35
7.12.5 LLD Leak	35
7.12.6 Shift Report	36
7.12.7 History	36
7.12.8 Alarms	36
7.13 Configuration	37
7.13.1 System Configuration	37
7.13.2 System Settings	38
Section 8 Technical Support	39

Section 1 Preface

Start Italiana S.r.l. has made every effort possible to see that this document is complete, accurate and updated. With every revision of the console, the related information is added to the document. Start Italiana S.r.l. reserves the right to make unannounced improvements and/or changes in the product and/or associated programs. Start Italiana S.r.l. is not liable for damages of any kind, including those resulting in the document, including typographical errors.

Making copies, citing quotes or other reproductions of all or part of this document is permitted only after written consent of Start Italiana S.r.l.

Patents protect trademark or name.

Copyright 2023© Start Italiana S.r.l. – All rights reserved

Section 2 General Warnings

Carefully read the instructions in this manual before you do the installation procedures.

Only approved persons are permitted to install this equipment and configure the console.

The manufacturer is not responsible for operations that are not included in this manual.

The manufacturer is not liable in regard to competent bodies for changes to the equipment and software that are not approved.

In case of failure or defect, refer directly to an authorized service provider or manufacturer.

The manufacturer is not liable for injury and/or damage to persons and/or property and/or pets caused by the failure to obey safety instructions.

All approved personnel must know all safety requirements in this manual, the configuration manual and the user manual.

Refer directly to an approved service provider or manufacturer for questions about the operation of the equipment.



IMPORTANT: You must read and obey all safety instructions in this manual before you use this equipment.



WARNING: Incorrect use of this equipment that does not agree with the instructions in this manual can cause a risk to safety.



Section 3 Introduction

This manual was prepared in accordance with IEC 82079-1 standards. "Preparation of instructions for use - Structuring, content and presentation - Part 1: General principles and detailed requirements and according to the ATEX Directive 2014/34/EU concerning equipment and protective systems intended for use in potentially explosive atmospheres."

This manual gives all necessary information about the installation of the MagLink LX console.

IMPORTANT: This manual must be used together with the related product manuals:



» M2050 LX4 Installation Manual / M2050-PLUS MagLink LX Plus Installation Manual

» M2051 LX 4 and LX Plus Configuration Manual

You must install the console as shown in M2050 LX4 Installation Manual / M2050-PLUS MagLink LX Plus Installation Manual, configure the console as instructed in the M2051 LX 4 and LX Plus Configuration Manual, and use the console in the field as shown in this manual.

WARNING: This device must not be discarded with household waste. This device is labeled in accordance with European Directive 2012/19/UE concerning used electrical and electronic appliances (waste electrical and electronic equipment – WEEE).



This guideline gives the methods for the return and recycling of used electronic devices as applicable throughout the EU. To return your used device, use the return and collection systems available to you.

The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, heat above 50°C or incinerate.



The table that follows lists reference data of the manufacturer:

<i>Data</i>	<i>Description</i>
Name	START ITALIANA S.r.l.
	Via Natta 6
Address	20823 Lentate Sul Seveso, (MB)
	Italy
Telephone	+39 0362 1581465
Fax	+39 0362 1581464
Website	www.startitaliana.com
e-Mail	support@startitaliana.it



NOTE: The units of measurement contained in this manual refer to a specified selection by the user. Refer to the for more information on how to set units of measure.

Section 4 General Description

This console is used to monitor probe levels and gives tank alarm notifications. The console can hold up to 16 on-board probes, four (4) on-board relays with six (6) inputs and an external expansion module that can hold up to four (4) expansion cards.



NOTE: A maximum of two (2) MagDirect consoles with 8 probes each can be added.



NOTE: Each expansion card can have 8 relay outputs, 8 digital inputs or 4-20mA. These cards can be put together so that the system can have 32 relays and 0 inputs, 32 inputs and 0 relays and a mixture of both in increments of 8.

The console can interface with a site's FCC/POS through serial or Ethernet connection.

The console has a resistive type touchscreen that can be used with fingers (also with gloves), stylus pens for touchscreens and other applicable tools. To use the screen, it is necessary to contact the screen and apply a light force.

The table below shows the technical characteristics of the console:

<i>MagLink LX Technical Characteristics</i>	
<i>Characteristic</i>	<i>Value</i>
Power supply	100 - 240 V~, 50-60 Hz
Consumption	15 VA
Operating temperature	(-10 - +50) °C
Relative humidity	(5 - 95)%, non-condensing
Number of probes	Up to 32 on LX 4 (16 probes through the internal barrier and 16 probes with added MagDirect modules), up to 12 on LX Plus
Number of ON-OFF external sensors	Up to 32 non-discriminating sensors, up to 16 discriminating sensors
Number of ON-OFF internal sensors	6 (only when Dipswitch 2 is ON) LX 4 console ONLY.
External relay outputs	Up to 32
Internal relay outputs LX4 model	4
Internal relay outputs LX Plus model	2
Lower power of the relay output	0,5 A, 33 V~, or 2 A, 30 V DC
Output power for the probes	12 V DC, 100 mA per output for each probe, connectors MR3 MR4 (up to 8 probes for each connector)
Serial communication of the probes	RS485
Host communication (management)	RS232 and TCP/IP
Printer communication	RS232 and USB
Integrated web server for remote configuration, consultation, communication, and emails as well as HOST COMMUNICATION	TCP/IP
Case	Plastic
Protection	IP40
Dimensions	265 x 190 x 95 mm

4.1 Compatible Probes

The probes in the list below are compatible with the MagLink LX:

- XMT EXD 485
- XMT SI 485
- XMT RF (an RF receiver is necessary)
- DMP-IS-485
- 924B (FMS) - **(924B probes are only compatible with LX Plus)**



NOTE: ALL the floats used on probes have more than 10 years of life time in the fuel tanks

Auxiliary equipment that can be used with the MagLink LX console include:

- Expansion cards, up to 32 relays and 0 inputs, up to 32 inputs and 0 relay, and a mixture of both in increments of 8.
- Local Printer
- VSmart Module (LX Plus only)
- OM4 Module (LX Plus only)
- LIM Module (LX Plus only)

4.2 Correct Use

Only use the MagLink LX console for use as given in this manual. The console must be installed in a safe area. The console includes an intrinsic safety barrier and two (2) channels (BRA-2SIP) to connect XMT-SI-485 and DMP-IS-485 probes.

The table below shows the characteristics of use of the intrinsically safe barrier contained in the console:

<i>MAGLINK LX Features (barrier)</i>	<i>Description</i>
Group (area of use)	II (Surface industries different from mines)
Category and type of potentially explosive atmosphere	(1) G
Protection mode	ia
Group of substances (gases, vapors or mists)	IIB

The specifications of use for console security and for the Barrier are given in this manual and on the product label.



IMPORTANT: Safety instructions constitute an attachment to this manual and users must acknowledge it before using the equipment.



WARNING: The Console must not be used in hazardous areas (because there is a risk of fire and explosion). The probes of the XMT-SI-485 family are installed in hazardous areas and must be connected to the Barrier contained in the console.



4.3 Incorrect Use

Incorrect and alternative uses include:

- **Resistive touch screen:** Only use fingers or special tools made for resistive touchscreens to select screen options.
- **USB and USB Port devices:** Only use this port for firmware updates, console backup and USB printer connection.
- **Serial ports:** Only use the serial ports for printer and PC connection with management programs that interface with the protocols given by Start Italiana S.r.l.
- **Network cable:** Only use the network cable connection for console configuration, and local network connections (Refer to the M2051-EU Configuration manual).

Section 5 Power ON/OFF



IMPORTANT: Only authorized/trained personnel can energize the console and must obey the manufacturer's instructions. Operation must obey the safety instructions shown in the Installation Manual (M2050-EU).

To energize the console:

1. Make sure that the power button is in the OFF position (0).
2. Connect the power cable.
3. Connect the corporate network cable, if necessary.
4. Push the power button to the ON position (1).

If the console is not configured when it is energized it will cause an alarm because it does not communicate with a tank. Push the **red arrows** up or down until you see the page "ALARM LOG." Push the **ACK** button to stop the alarm.


To make changes to the console configuration, refer to the MagLink LX Configuration Guide M2051-EU.

To de-energize the console, push the power button to the OFF position.




NOTE: The MagLink LX console uses an industrial grade SD card. Safe data storage is available if there is power loss.

Section 6 Product Labels

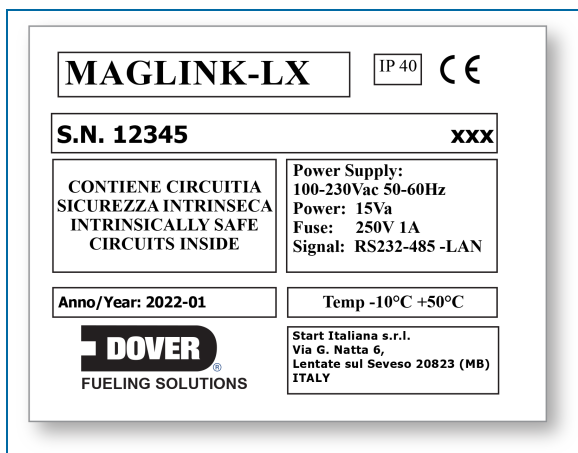


- Name and address of the manufacturer
- CE marking with the Notified Body
- Product Name
- The "Caution" symbol (0434B of 01/2004), according to ISO 7000
- Serial number
- Year of production
- Power Supply(VAC and Hz)
- Power consumption (VA)
- Operating temperature (°C)
- Ingress protection (IP grade)
- Fuse rating
- Indication that inside there is intrinsically safe circuit

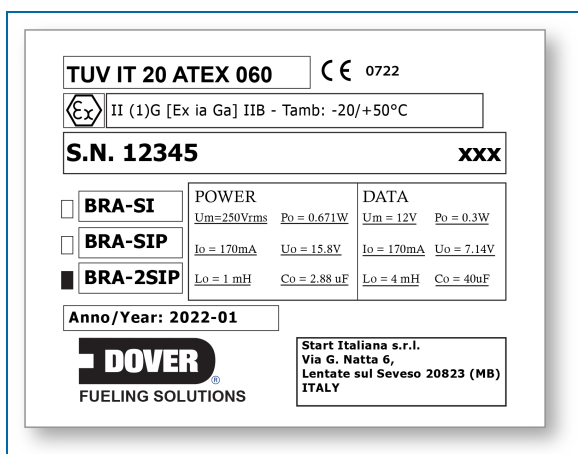

- Name and address of the manufacturer
- Equipment Type (BRA-SIP, or BRA-2SIP)
- ATEX Reference number of the certificate
- ATEX Marking: Ex II (1) G [Exia] IIB FISCO power supply UM=250 V [Exia] IIB
- Serial number
- Electrical data


Section 7 Graphical User Interface

7.1 Inventory

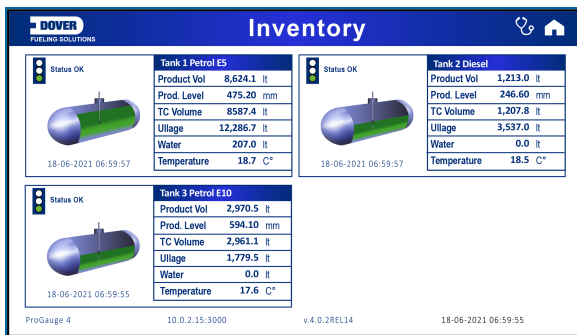

The Inventory page shows information related to tanks. Up to four (4) tanks can be shown on a page.

TIP: Move your finger across the display to the right to see the information for more tanks.

 Tap on a tank image to get more information about that tank.

A screen will open that shows information related to the categories in the tables that follow:

Volume	
Product	Gross Product volume at the current temperature (includes the water volume)
TC Volume	Compensated product volume temperature (at 15° C or 20° C: refer to the configuration)

Volume

Ullage	Empty space calculated from the safe working capacity (refer to the configuration)
Capacity	The total capacity of the tank (refer to the strapping table).



NOTE: The density data in the table that follows will show only if a Density Measurement sensor is installed.

Info

Density	The density at current temperature.
Tc Density	The density at the reference temperature.
Weight	The weight of the product calculated by the measured density.
Product Level	The current product level.

Temperature

Current	The current product temperature.
Compensated	The temperature setting that is used for volume compensation (refer to the configuration).

Water

Water Vol.	The current water volume.
Water Level	The current water level.



NOTE: The Density value will be the same as the TC Density unless there is a Density Float installed on the probe. The console will show the density value at the current temperature only when there is a Density Float installed on the probe.

7.1.1 Status Icons

Status OK (Green) No Alarm

The screenshot shows the 'Inventory detail' interface for '1 - Tank 1 Diesel' with a capacity of 22,011.4 litres. The status is 'Status Ok' with a green traffic light icon and a timestamp of 09-12-2021 16:49:07. A 3D tank diagram shows a green liquid level. A 'NO ALARM' button is visible. The interface includes two tables: 'Volume' and 'Info'.

Volume	litres	Info
Product Vol	12,487.2	Density 827.1 Kg/m3
TC Volume	12,415.8	TC Density 831.8 Kg/m3
Ullage	8,423.6	Weight 10,071.766 Kg
Capacity	22,011.4	Prod.level 635.47 mm

Water	Temperature °C
Water Vol 307.4 litres	Current 21.8
Water Level 16.27 mm	Compensated 15.0

Footer: ProGauge 4, 192.168.1.14:3000, v.4.16.1, Serial: 00001, 09-12-2021 13:49:04

- The "Traffic Light" is green.
- There are no Alarms.
- The NO ALARM button is "grayed out."

Status Alarm HH, H (Red) In Alarm

The screenshot shows the 'Inventory Detail' interface for '1 - Tank 1 Petrol E5' with a capacity of 22,011.4 litres. The status is 'Alarm Water' with a red traffic light icon and a timestamp of 18-06-2021 07:12:00. A 3D tank diagram shows a green liquid level. An 'ACKNOWLEDGE ALARM' button is visible. The interface includes two tables: 'Volume' and 'Info'.

Volume	litres	Info
Product Volume	8,624.1	Density 760.0 kg/m3
TC Volume	8,587.4	TC Density 760.0 kg/m3
Ullage	12,286.7	Weight 6,369.076 Kg
Capacity	22,011.4	Prod. Level 475.2 mm

Water	Temperature °C
Water Vol 2,167.1 litres	Current 24.6
Water Level 158.00 mm	Weight 15.0

- The "Traffic Light" is red.
- The alarms are HH (High-High) and H (High).
- The color in the related fields is changed to pink.
- The "Acknowledge Alarm" button is On. Push the Acknowledge Alarm button to acknowledge the alarm in the system.

Status Alarm AH, H (Yellow) Alarm Acknowledged

Inventory Detail

1 - Tank 1 Petrol E5 (Tank Capacity 22,011.4 litres)

Alarm Water

18-06-2021 07:11:15

ACKNOWLEDGED

Volume	litres
Product Volume	8,624.1
TC Volume	8,587.4
Ullage	12,286.7
Capacity	22,011.4

Info	
Density	760.0 kg/m3
TC Density	760.0 kg/m3
Weight	6,369.076 Kg
Prod. Level	475.2 mm

Water	
Water Vol	1,108.2 litres
Water Level	89.00 mm

Temperature	°C
Current	18.7
Compensated	15.0

- The "Traffic Light" is yellow.
- The alarms HH (High-High) and H (High) have been acknowledged
- The color in the related fields is changed to yellow.
- The ACKNOWLEDGED button is "grayed out."

TIP: Move your finger down the display to see the next screen. The screen will show the configured tank thresholds and other data from the tank setup.



Inventory Detail

1 - Tank 1 Petrol E5 (Tank Capacity 22,011.4 litres)

Thresholds (mm)

HH	→		925.00
HH	→		900.00
L	→		75.00
LL	→		50.00
Water	→		40.00

Settings

Serial	0000008619
Capacity	22,011.4 lt
Max level	1,000.00 mm
Product offset	0.00 mm
Water offset	0.00 mm
Min Water float	0.00 mm
Safe capacity	95.0 %

TIP: Move your finger down the display to see diagnostics information and the Tank Strapping table.



Inventory detail

1 - Tank 1 Diesel (Tank capacity: 22,011.4 litres)

Diagnostic [DMP08]		09-12-2021 13:44:27		Strap table [mm] - [litres]	
Data 1	73988.00	Data 6	11	0	0.0
Data 2	29751.00	Data 7	0	1	207.0
Data 3	149165.00	Data 8	0	10	264.7
Data 4	809.600	Data 9	2	20	332.8
Data 5	255			30	413.2
				40	506.3
				50	613.5
				60	731.3
				70	855.5
				80	985.9
				90	1,121.8
				100	1,262.8

Read diagnostic

Diagnostic

Temperature

Level

ProGauge 4


192.168.1.14:3000

v.4.16.1

Serial: 00001

09-12-2021 13:44:49

7.2 Print/Email Current Inventory On Demand

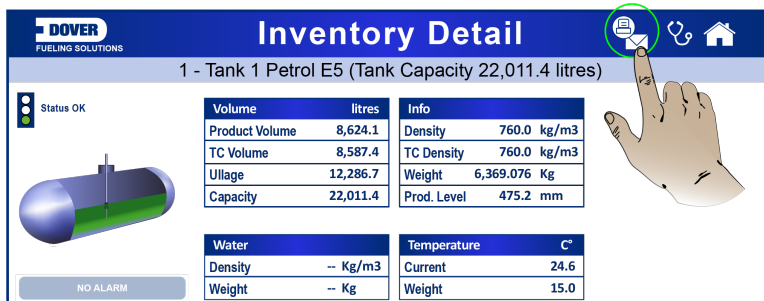


DOVER
FUELING SOLUTIONS

Inventory Detail

1 - Tank 1 Petrol E5 (Tank Capacity 22,011.4 litres)

Status OK

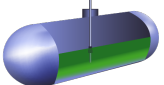


NO ALARM

Volume	litres	Info
Product Volume	8,624.1	Density 760.0 kg/m ³
TC Volume	8,587.4	TC Density 760.0 kg/m ³
Ullage	12,286.7	Weight 6,369.076 Kg
Capacity	22,011.4	Prod. Level 475.2 mm

Water	Temperature	°C
Density -- Kg/m ³	Current	24.6
Weight -- Kg	Weight	15.0

Push the **Email/print** button in the top right of the Tank Inventory Detail" screen.

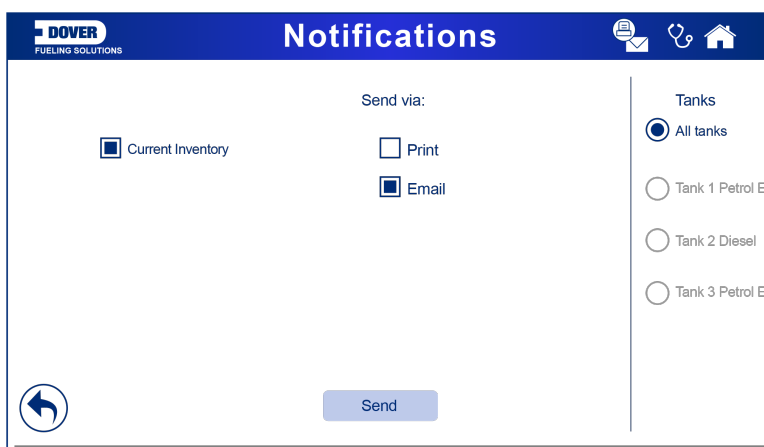

DOVER
FUELING SOLUTIONS

Notifications

Send via:

☒ Current Inventory ☐ Print ☒ Email



Tanks:

☒ All tanks

☐ Tank 1 Petrol E

☐ Tank 2 Diesel


☐ Tank 3 Petrol E

- Select a radio button on the right panel of the screen for the applicable tanks.
- Select the method to send, Print or Email.
- Push Send

Print will send a print job to a local printer. Email will send an email notification to all configured contacts (see the M2051 LX4 Configuration manual for information about contacts).

7.3 Main Menu

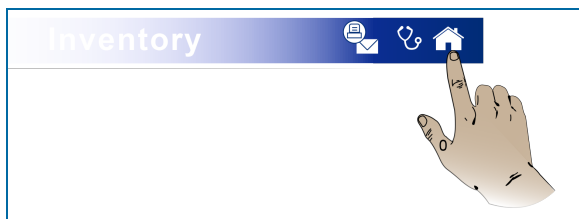

Push the **Home** button in the top right of the Inventory screen to go to the *Main Menu*.




NOTE: The LLD icon is only applicable to the MagLink LX Plus console.


7.4 Status Page

Push the **Status** icon on the *Main Menu*. The display will navigate to the "Status" screen that shows information related to the condition of the Tanks, Sensors or LLD (MagLink LX Plus console only). Select the applicable button on the screen.


The icons will show in green if there are no alarms. If a tank, sensor or LLD (MagLink LX Plus only) is in alarm, its icon will show in red.

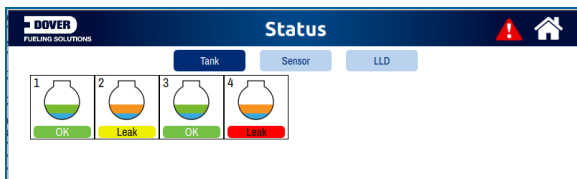

Tank Status Page

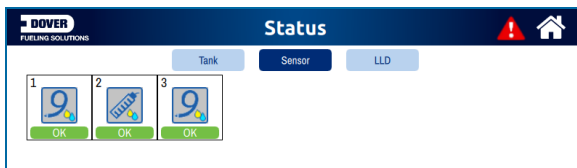

Sensor Status Page

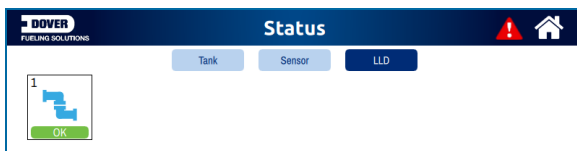









LLD Status Page (MagLink LX Plus Console Only)

7.5 Calendar

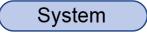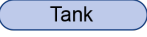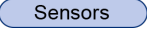

Push the **Calendar** icon on the *Main Menu* and the "Calendar" screen will come into view.

There is a group of icons along the left side of the calendar. These icons are used as filters to select what events are shown on the calendar display.

-  Select this icon to show events related to the console.
-  Select this icon to show events related to tanks.
-  Select this icon to show events related to sensors.
-  Select this icon to show events related to LLDs (for MagLink LX Plus console only).
-  Select this icon to show deliveries.
-  Select this icon to show alarms.
-  Select this icon to show warnings.
-  Select this icon to show leak tests.

Use the radio buttons along the right side of the calendar to select the applicable tanks.

Push a date box to see information for the events on that date.

7.6 Notifications

The screenshot shows the 'Notifications' screen with a dark blue header containing the 'DOVER FUELING SOLUTIONS' logo and navigation icons. The main area is divided into three sections: 'Information to send:' with checkboxes for 'Current inventory', 'Last delivery', 'Last leakage', and 'Last daily shift'; 'Send via:' with checkboxes for 'Print' and 'Email' (which is selected); and 'Tanks' with radio buttons for 'All tanks', 'Tank 1 Petrol E', 'Tank 2 Diesel', and 'Tank 3 Petrol E'. A 'Send' button is at the bottom center. A status bar at the very bottom displays system information: 'ProGauge 4', '10.0.2.15:3000', 'v.4.0.2.BEL14', 'Serial: 00001', and '18-06-2021 07:02:09'.

Push the **Notifications** icon on the *Main Menu* and the "Notifications" screen will come into view.

Under *Information to send*, select the applicable **type** of information to send.

Under *Send via*, select the **method** used to send the information.

Push the **SEND** button.

Select the **recipients** from the *prompt screen* that shows.

7.7 Leak Test

The screenshot shows the 'Leak Test' screen with a dark blue header. The main area contains settings for a leak test: 'Leak test type:' with buttons for '.1 gph' and '.2 gph'; 'Period(hh:mm):' with input fields for '3' and '0'; 'Min volume (0-100%):' with an input field for '50'; 'Execute test:' with 'Now' and 'Later' buttons; and a date/time picker for 'Year: 2021', 'Month: 6', 'Day: 18', 'Hour: 7', and 'Minute: 7'. A 'Submit' button is on the left. A red text note at the bottom states: 'These are the default values. The test for this tank has not been set.' On the right, a 'Tanks' panel shows radio buttons for 'Tank 1 Petrol E' (selected), 'Tank 2 Diesel', and 'Tank 3 Petrol E'. The same status bar as in the previous screenshot is at the bottom.

In this screen the user can configure the tank leak test settings.


Select the **Tank** in the right panel.

Select the tank leak test **type** (0.2 gph or 0.1 gph).

Enter the time **period** and the **minimum volume** that must be in the tank for the test to start (make sure that this parameter agrees with the leak certification of the system).

Select if the test is to start **Now** or you can configure a **start date and time** to start a test **Later**.

7.8 LLD (MagLink LX Plus Console Only)

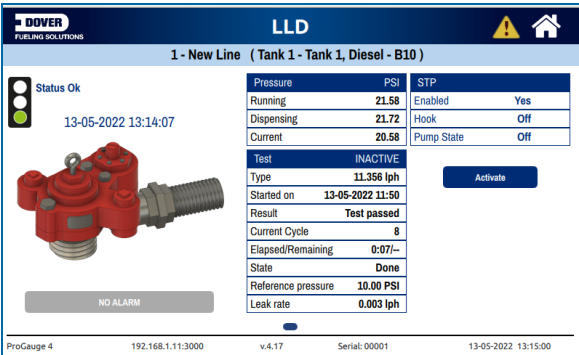

Pressure	
Running	The pipeline pressure once the STP has stopped running
Dispensing	The pipeline pressure during the dispensing process
Current	The current pipeline pressure

STP	
Enabled	Shows whether the STP is blocked or not. In normal condition it will show "Enable=Yes" but if the Leak is detected and the STP has been disabled then it will show "Enable=No".
Hook	Shows the state of the hook signal
Pump state	Shows whether the STP has been confirmed to be ON (feedback signal received)

Alarm Conditions

The alarm conditions are shown next to the traffic light. Possible conditions are:

Ok - No alarm

Disabled - When the pipeline has been disabled via the web configuration

OPEN: the pressure sensor is disconnected from the I/O module (under pressure)


SHORT: the wires from pressure sensor are shorted (overpressure)

NO LINK: there is a problem with communication to the PLLD-DAS or I/O module (wires can be disconnected or the module is not powered)

NO STP LINK: there is a problem with the communication to the LIM (wires can be disconnected or LIM is not powered)


STP CONTROLLER: Two conditions, OFF ERROR when the STP Pump can't be activated (eg broken wires to STP) or ON ERROR when the STP is activated but it cannot be deactivated (e.g shorted wires to STP)

LEAK: test result is "Leak Detected"

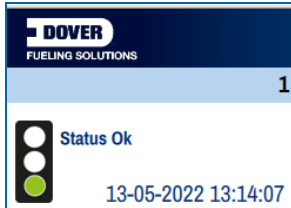

7.8.1 Force STP Activation

If you select the **Activate** button on the LLD screen, the user will be prompted to enter the 6-digit numeric password. Two buttons **10 seconds** and **30 seconds** will come into view. Select one of these two buttons to force the STP to be activated for 10 or 30 seconds as a way to do a check of the operation of the STP. The sequence of screens is shown below:

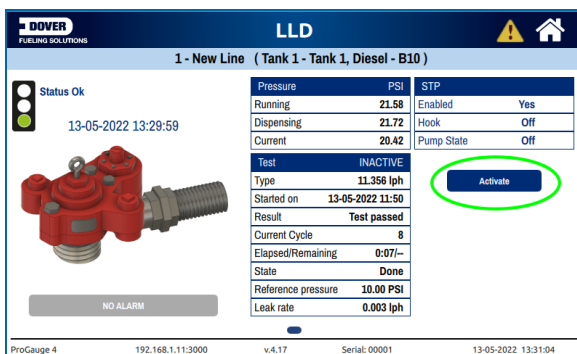

1

2

3

4

5

6

7

8

9

CLR

0

Ok

maglink4

✕

Password

Close



DOVER

FUELING SOLUTIONS

LLD

1 - New Line (Tank 1 - Tank 1, Diesel - B10)

Status Ok

13-05-2022 13:33:23

NO ALARM

Pressure	PSI	STP
Running	20.38	Enabled Yes
Dispensing	21.72	Hook Off
Current	20.38	Pump State On

Test	INACTIVE
Type	11.356 lph
Started on	13-05-2022 11:50
Result	Test passed
Current Cycle	8
Elapsed/Remaining	0:07/-
State	Done
Reference pressure	10.00 PSI
Leak rate	0.003 lph

15 seconds

30 seconds

STOP

ProGauge 4

192.168.1.11:3000

v4.17

Serial: 00001

13-05-2022 13:34:14

7.8.2 Beta Calibration

Swipe up on the LLD screen. The screen will change to show the Calibration menu. In the Calibration menu, the system can calculate the Beta pipe stiffness if the user has started a controlled 3.0 gph leak in the pipeline. The console will start and stop the STP multiple times and will collect pressure data to calculate the Beta. The sequence of screens is shown below:

DOVER

FUELING SOLUTIONS

LLD

1 - New Line (Tank 1 - Tank 1, Diesel - B10)

Status Ok

13-05-2022 13:14:07

NO ALARM

Pressure	PSI	STP
Running	21.58	Enabled Yes
Dispensing	21.72	Hook Off
Current	20.58	Pump State Off

Test	INACTIVE
Type	11.356 lph
Started on	13-05-2022 11:50
Result	Test passed
Current Cycle	8
Elapsed/Remaining	0:07/-
State	Done
Reference pressure	10.00 PSI
Leak rate	0.003 lph

Activate


ProGauge 4

192.168.1.11:3000



v4.17

Serial: 00001

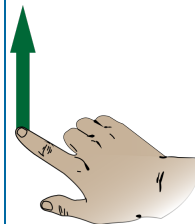13-05-2022 13:15:00









DOVER FUELING SOLUTIONS **LLD**  

1 - New Line (Tank 1 - Tank 1, Diesel - B10)

Info	
Sensor position	5
LIM / Slip	1 / 1
Sensor Span	87 psi

Line	
Length	1,250.0 cm
Volume	0.05663 Ncm
Beta	1000
Cal.Beta	0

Leak Generator: **3.0** (gph)  

Number of cycles: **12**  


☐ Immediately

Start Calibration

ProGauge 4 192.168.1.11:3000 v.4.17 Serial: 00001 13-05-2022 13:42:44


- Set the “Leak Generator” to **3.0 (3.0 gph)** and the “Number of cycles” to **12**.
- Push the **Start Calibration** button. Wait for the calibration cycle to complete.
- The configuration parameters will show in the left panels.

7.9 History

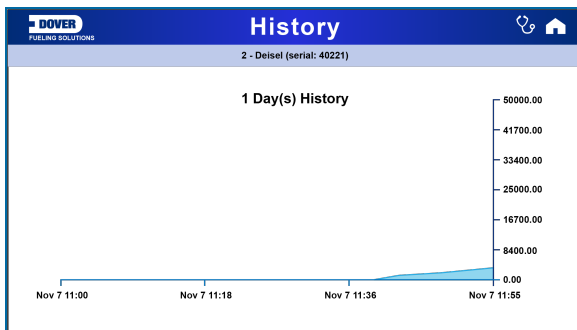

Push the **History** icon on the *Main Menu* and the History screen will come into view. The History screen shows the tank volume over a selected period.

7.10 Maintenance

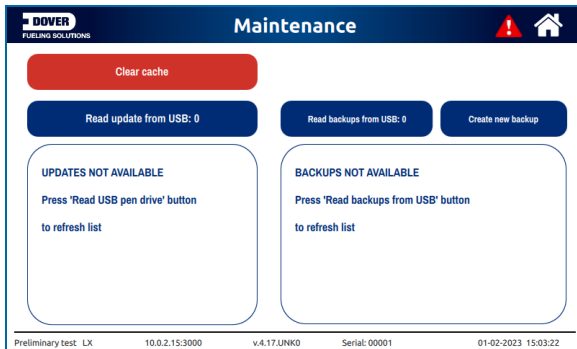


Push the **Maintenance** icon on the *Main Menu* and the "Maintenance" screen will come into view. In this screen you can:

- Use a USB thumbdrive to do software updates:



NOTE: It will be necessary to have Single Sign-On (SSO) credentials to get access to manuals, instructions, software updates and other important assets. Speak with your ProGauge sales representative or use the contact information in the front of this manual to get information.

- Get the update file from Dover Fueling Solutions. Go to: [EMEA Technical Services](#) > ATG Library > ProGauge Consoles > MagLink LX 4 & LX Plus > Software.
- Open the **LX4Plus_xxx_update_pack.zip** file.
- Download the lx4_new.zip file.
- Copy it onto a USB thumb drive.
- Put the thumb drive into the USB port on the console.
- Push the **Read update from USB** button.
- Restore a configuration backup from a USB thumb drive:
 - Put the USB thumb drive containing the backup to the console into the USB port of the console.
 - Push the **Read backups from USB** button.
- **Create new backups** : This will make a backup of the configuration. If a USB thumb drive is put into the USB port of the console, then the backup will be stored to the thumb drive. If there is no USB thumb drive in the console, then the backup will be stored to the SD-card.

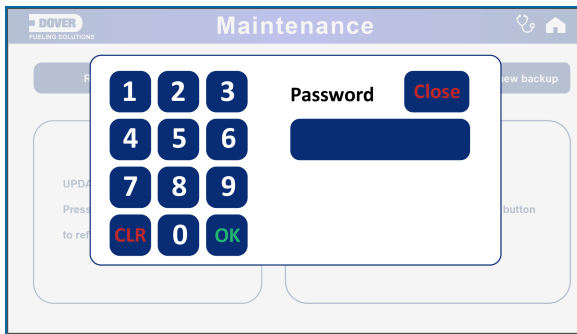

Push one of the **buttons** on the "Maintenance" screen. A 6-digit password must be entered before you can proceed.



NOTE: Note: The password is set up on the web configuration page (refer to **Passwords** in the [M2051 LX 4 and LX Plus Configuration Manual](#)).



REMINDER: Only an Admin user can set or change a password.



TIP: Delete the cache memory: This will help when the console responds slowly to functions or when alarm statuses do not update correctly.


7.11 Shifts



Push the **Shifts** icon on the *Main Menu* and the "Shifts" screen will come into view. The shifts from the last three days will show.

Select the **Open Station** button to manually open/close the site. After the site is closed, the console can monitor the tank for a sudden loss event (a sudden loss threshold must be configured for this).

When the site is closed, a red key will appear at the bottom of the screen. See the illustration below:

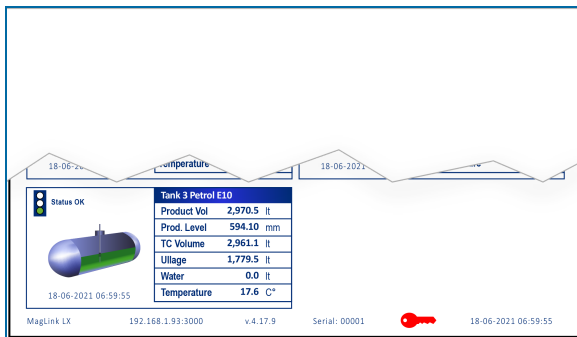

Select the **Close shift** button to manually close a shift.

Select the **Last shift** button to send the last shift information to a connected printer.

7.12 Reports




Push the **Reports** icon on the *Main Menu* and the "Reports" screen will come into view. You can make reports for the selections shown in the screen image above.

7.12.1 Sales Report



The sales report shows the daily tank sales for the last seven days

7.12.2 Reconciliation Report

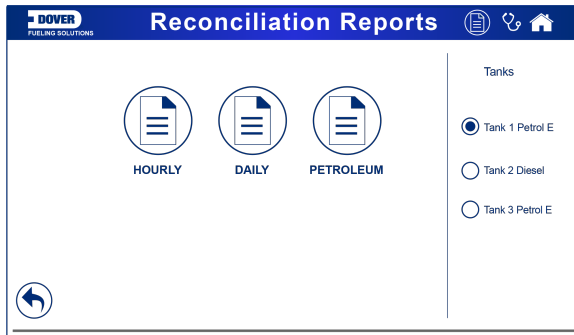

To see a **Reconciliation Report**:

- Select a **Tank** from the panel on the right of the screen.
- Select the report type (Hourly, Daily, Petroleum).

The petroleum report shows data for the last 30 days. The console will calculate the variance because of pump calibration, theft volume, test vend volume (as long as the related configuration has been done in the ACR parameters).

7.12.3 Delivery Report

DOVER FUELING SOLUTIONS							
Delivery							
Note: Report for the last 7 days							
TANK	START/END TIME	DURATION (min)	OPENING STOCK (l)	CLOSING STOCK (l)	DELIVERIES (l)	START/END WATER (l)	START/END TEMP (C°)
2	01.10.2020 19.12.49	7.2	3066.3	4428.6	1362.4	78.1	26.6
	01.10.2020 19.20.00					78.0	26.6
2	30.09.2020 16.50.03	2.1	1250.2	3066.1	1816.3	74.2	27.3
	30.09.2020 16.52.09					73.8	27.4

The delivery report shows all of the tank delivery information for the last seven days.

7.12.4 Leak Report

DOVER FUELING SOLUTIONS							
Leak							
Note: Report for the last 7 days							
TANK	START/END TIME	DURATION (min)	FLOWRATE (l/h)	PRODUCT TTC (l)	WATER (l)	TEMPERATURE (C°)	STATUS
2	07-12-2021 18:27:01	946.0	-0.783	3,421.7	---	15.3	Power failure during test
	08-12-2021 10:13:02						

The Leak report shows all the leak test results for the last seven days.

7.12.5 LLD Leak

DOVER FUELING SOLUTIONS							
LLD Leak							
Note: Report for the last 7 days							
LINE	START/END TIME	DURATION	TYPE	RUNNING PRESSURE (gpa)	REFERENCE PRESSURE (PSI)	LEAK RATE (gpa)	RESULT
1	07-08-2023 18:31:07	0:01	3.0	---	10.00	---	Aborted (stopped)
	07-08-2023 18:32:49						
1	07-08-2023 18:28:49	0:02	3.0	49.99	10.00	---	Aborted (stopped)
	07-08-2023 18:29:27						
1	04-08-2023 14:49:19	0:01	3.0	---	10.00	---	Aborted (stopped)
	04-08-2023 14:50:20						
1	04-08-2023 14:39:45	0:01	3.0	---	10.00	---	Aborted (stopped)
	04-08-2023 14:41:27						

The LLD Leak report will show LLD historical results for the last 7 days.

7.12.6 Shift Report

<div>DOVER FUELING SOLUTIONS</div> <div>Shift Report</div> <div> </div>							
Note: Report for the last 7 days							
TANK	START/END TIME	OPENING STOCK (l)	CLOSING STOCK (l)	DELIVERIES (l)	DISPENSER SALES (l)	START/END WATER (l)	
1	30.09.2020 12.08.44	8,947.2	8,947.4	—	—	796.1	
	30.09.2020 12.08.50					796.1	
2	30.09.2020 12.08.44	1250.2	1250.1	—	—	74.3	
	30.09.2020 12.08.50					74.3	
1	30.09.2020 09.34.06	8,949.6	8,947.2	—	—	795.3	
	30.09.2020 12.08.44					796.1	
2	30.09.2020 09.34.05	1250.1	1250.2	—	—	73.9	
	30.09.2020 12.08.44					74.3	

The shift report shows a full report of each shift for the last seven days. The report shows the deliveries and tank sales that occurred during the shift.

7.12.7 History

<div>DOVER FUELING SOLUTIONS</div> <div>History</div> <div> </div>							
Note: Report for the last 7 days							
TANK	TIME	PRODUCT LEVEL (mm)	PRODUCT VOLUMES (l)	PRODUCT TC (l)	WATER (l)	TEMPERATURE (°C)	DENSITY (l)
1	01.10.2020 15.41.32	313.07	5072.0	5010.3	1317.3	28.9	760
2	01.10.2020 15.41.30	249.97	1249.8	1232.7	71.5	27.299999	760
1	01.10.2020 15.40.32	313.06	5071.8	5010.1	1317.3	28.9	760
2	01.10.2020 15.40.30	249.97	1249.8	1232.7	71.5	27.299999	760
1	01.10.2020 15.39.32	307.99	4968.1	4907.2	1268.4	28.9	760
2	01.10.2020 15.39.30	249.97	1249.8	1232.7	71.5	27.299999	760
1	01.10.2020 15.38.31	305.04	4908.1	4848.0	1255.2	28.9	760
2	01.10.2020 15.38.29	249.97	1249.8	1232.7	71.5	27.299999	760

The History report shows the inventory data of each tank. The console stores the inventory of every tank, for every minute.

7.12.8 Alarms

<div>DOVER FUELING SOLUTIONS</div> <div>Alarm Reports</div> <div> </div>		
SYSTEM	LLD	SENSOR

The Alarms report shows the alarms for the last seven days. The three (3) types of alarm screens are shown below:

<div>DOVER FUELING SOLUTIONS</div> <div>Alarms</div> <div> </div>							
Note: Report for the last 7 days							
TANK	TIME	PRODUCT LEVEL (m)	PRODUCT VOLUME (gal)	WATER (m)	WATER (gal)	ALARM	STATUS
4	09-08-2023 09:15:01	35.67	1,193.3	1.05	35.2	LEAK	ALARM
2	08-08-2023 15:48:21	38.60	1,227.9	—	—	LEAK	ACKNOWLEDGED
4	08-08-2023 15:47:43	—	—	—	—	—	—

System Alarm Screen


LLD alarms							
Note: Report for the last 7 days							
LINE	TIME	TYPE (gph)	RUNNING PRESSURE (PSI)	REFERENCE PRESSURE (PSI)	LEAK RATE (gph)	ALARM	STATUS
1	08-08-2023 15:59:04	--	--	--	--	--	--
1	08-08-2023 15:58:28	--	--	--	--	NO LINK	ALARM
1	08-08-2023 15:51:30	--	--	--	--	--	--

LLD Alarm Screen

Sensors alarm				
Note: Report for the last 7 days				
TIME	SENSOR NUMBER	SENSOR NAME	ALARM	STATUS
03-08-2023 08:11:42	1	V1-1-0	--	--
02-08-2023 15:53:28	1	V1-1-0	No link	Alarm


Sensor Alarm Screen

7.13 Configuration

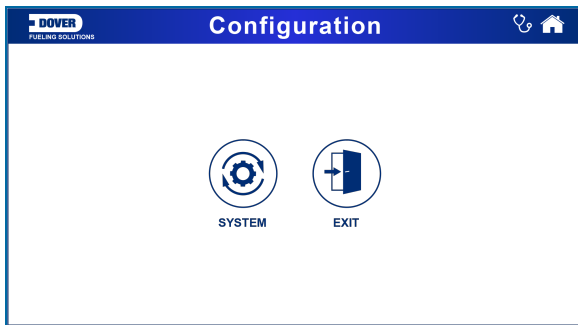

Push the **Configuration** icon on the *Main Menu*, enter your **Password** at the prompt and the "Configuration" screen will come into view.

7.13.1 System Configuration

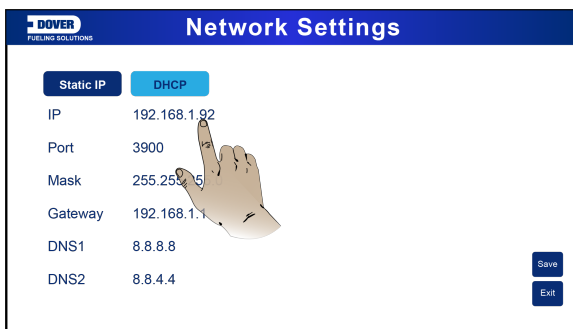

Push the **System** icon on the *Configuration Menu* and the "Network Settings" screen will come into view.

- Select a **parameter** to change. A keypad will come into view.

The image shows the 'Network Settings' screen. On the left is a vertical menu with options: Status, IP, Port, Mask, Gateway, DNS1, and DNS2. The 'IP' option is selected. A numeric keypad is displayed in the center, with buttons for digits 1-9, 0, a decimal point, and a 'CLR' button. To the right of the keypad, the 'IP' field shows '192.168.1.92'. Below this are 'Cancel' and 'OK' buttons. At the bottom right are 'Save' and 'Exit' buttons. The DNS2 field at the bottom left shows the value '8.8.4.4'.

- Enter the new **value**.
- Click **OK** to save the value.

When you have completed all necessary changes, Click **Save**.

7.13.2 System Settings

The image shows the 'System Settings' screen. It features a left-hand menu with options: Language, Alarm Tolerance, Leak Threshold, Date Format, Level Unit, Volume Unit, TC Volume, and Leak Algo. The 'Language' menu is expanded, showing 'English', 'French', 'German', 'Italian', and 'Polish'. The 'Alarm Tolerance' is set to '10.00 mm'. The 'Leak Threshold' is set to '20.0' with the unit 'Max flow/hour (litres)'. The 'Date Format' has three options: 'yyyy-MM-dd', 'dd-MM-yyyy', and 'MM-dd-yyyy'. The 'Level Unit' has 'mm', 'cm', and 'inches'. The 'Volume Unit' has 'litres' and 'gallons'. The 'TC Volume' has two temperature ranges: '15.0°C - 59.0°F' and '20.0°C - 68.0°F'. The 'Leak Algo' has two options: '0.1 GPH (0.38 LPH)' and '0.2 GPH (0.76 LPH)'. On the right side, there are navigation buttons: '<--', '-->', 'Save', and 'Exit'.

Push the **Tank** icon on the *Configuration Menu* and the "System Settings" screen will come into view.

You can make changes to Tank configuration parameters in this screen (see the image above)

When you have completed all necessary changes, Click **Save**.

Push the **Exit** button to navigate from this screen to go back to the *Configuration menu*.

Section 8 Technical Support

When you ask for technical support from DFS, it is recommended that you give direct access to the console over the internet through ports 3000 and 22. As an alternative, the console can be connected to a site computer and technical support can get access through a third-party program (such as TeamViewer). If technical support cannot get access to the console in one of these two methods, the user must supply technical support with the log files and the database backup of the console.

Refer to the "Utility" section of the M2051 LX4 Configuration manual for information on log files and the database backup in the console.

Revisions - M2052

Revision #	ECO	Effective	Software Version	Key Changes
0	1785	8/19/2020		Initial Release
1	1836	12/3/2020		Adds Settings and Shifts
2	1891	4/7/2021		Corrected typo under GUI > Configuration. Add LX Plus characteristics, new address for Start Italiana
3	1944	8/10/2021		New screens for Inventory Detail, Leak Test, Reports, Reconciliation, Sensor Alarms, System Settings, Leak Test added to Main Menu, New Technical Support procedure.
4	1998	3/14/2022		density value note under "Inventory." Screen updates.
5	DB	9/14/2023		General updates, new screens. LLD support.



NOTE: It is possible that older software versions might not support all features

ProGauge

