M00-20-8331-01 Initial Setup for Black Box SiteSentinel® iSite™/Integra™

Procedure Guide

1   Introduction

This procedure guide shows the initial setup of the date/time function of a black box (Blank Door) SiteSentinel iSite/Integra console.

1.1   Equipment Required

- Laptop PC
- Crossover cable
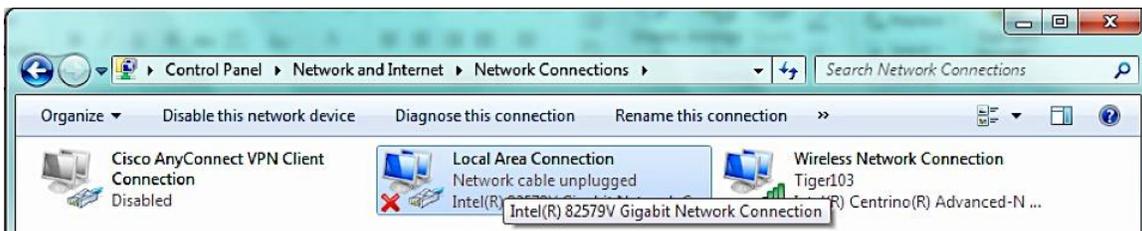- USB Maintenance Key (with VNC program installed)

1.2   Procedure

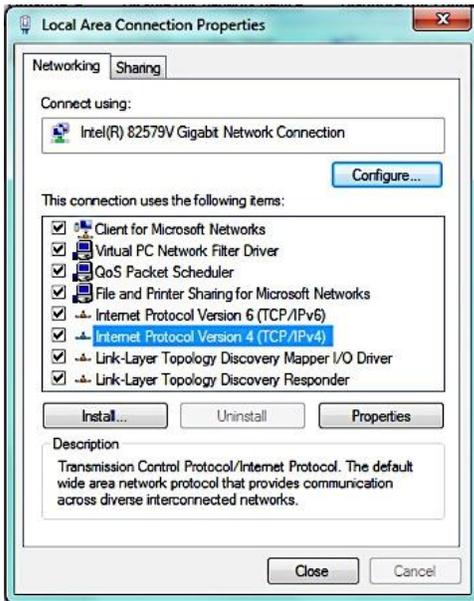Insert the Maintenance Key into a USB port on the Laptop and copy the *vncviewer.ren2exe* program to the desktop.

IMPORTANT: Only use the supplied VNC program found on the USB Maintenance Key. Other VNC programs might not be compatible.
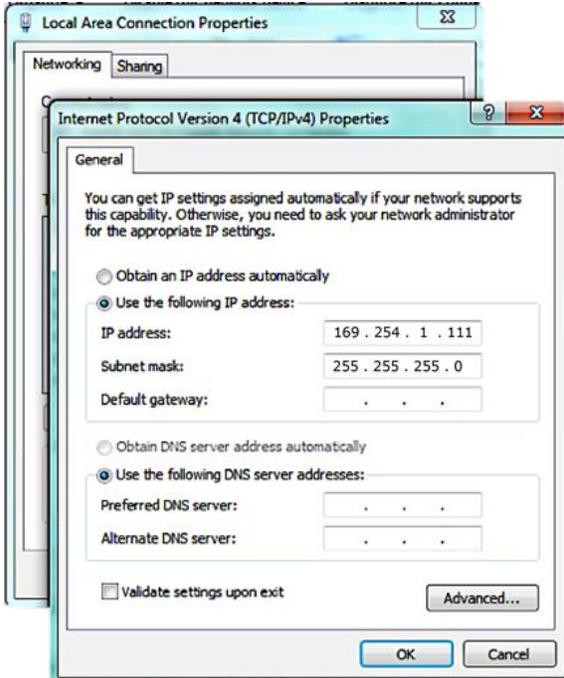
---

1. After the file has been copied to your desktop, rename the file "*vnc.exe*". The desktop icon above should show.

2. Connect the crossover cable to the laptop and the TCP/IP port located on the side of the console.

    a. To direct connect to the console with the crossover cable, connect the crossover cable from a laptop PC directly to the Ethernet port on the console. The user's PC will show a message that shows "Limited or No Connectivity."

    b. You must change the Local Area Connection on your Laptop to these settings:
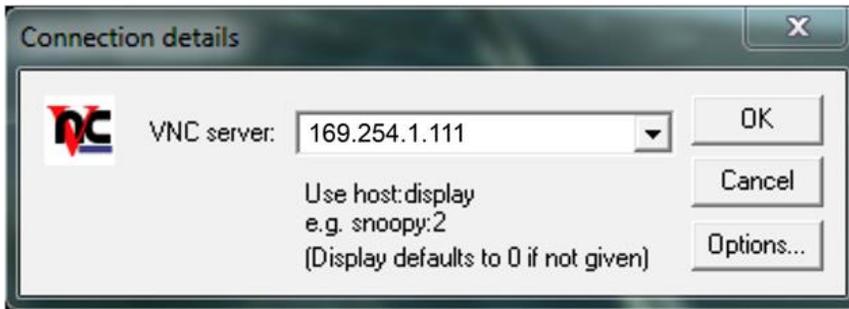

    i. Go to the **Start menu > Control Panel > Network and Internet > Network Connections**.

    ii. Right-click on **Local Area Connection** to bring up connection properties.

    iii. Select the **Networking** tab.
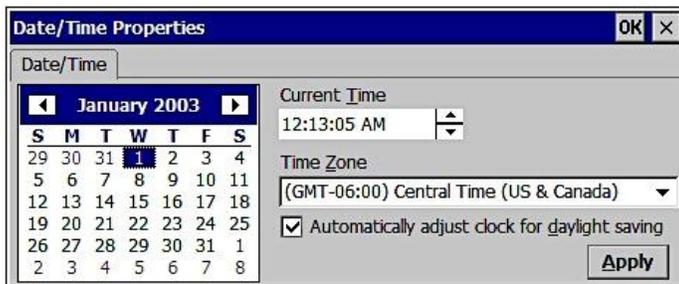
iv. Select **Internet Protocol Version 4 (TCP/IPv4)**.

v. Select the **Properties** button for TCP/IPv4.

vi. Select the radio button for **Use the following IP Address**. Enter the setting as shown in the image below:

3. Run **VCN.exe** from the Desktop.

4. A prompt window will come into view for VNC Server.

    a. Enter **169.254.1.111**

    b. Click **OK**.

5. The main screen of the console will show a prompt to set the date and time.

Proper time is require. Check RTC battery.

6. Use the controls to set the **Date**, **Time** and **Time Zone**.

7. Click **Apply** and close the VNC program.

8. Open a browser (e.g., Internet Explorer, Firefox).

9. Type http://169.254.1.111 in the Internet search bar. You will be connected to the login screen of the SiteSentinel iSite or SiteSentinel Integra.

10. At the login screen of the console, enter the Username: **Administrator.**

11. Enter the default Password: ***** (the default password is the asterisk character [Shift + 8]).

12. Once you are logged into the system, you can proceed to program the console.