
Installation Instructions

12263

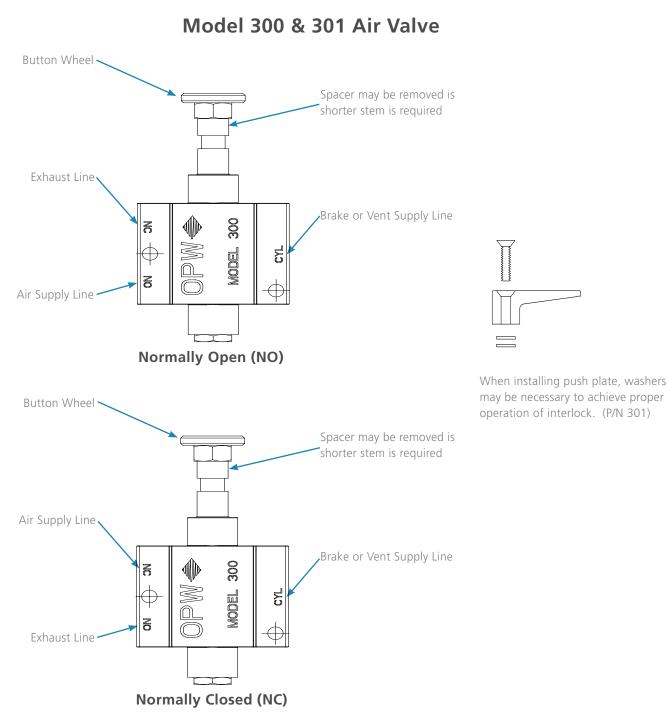

- 1. A suitable thread sealant is required. Allow for recommended setup time prior to testing
- 2. Use Anti-Seize compound on mounting bolt thread prior to installation
- 3. Always install an air fitting with a 4" (inch) minimum section of air line in the exhaust port of the valve. Position section of air line down to prevent moisture from entering the valve
- 4. Actuation requirements: Adjust button wheel in or out to achieve 1/4" min to 9/16" max stroke



www.civacon.com 🗢 9393 Princeton-Glendale Road 🗢 Hamilton, Ohio, USA 45011 🗢 Phone: (800) 560-6601

NOTE: All information subject to engineering and/or other changes. All trade names are copyrighted. Patents Pending. ©2018 Civacon. ©2018 Delaware Capital Formation, Inc. All Rights Reserved. DOVER and the DOVER logo are registered trademarks of Delaware Capital Formation, Inc., a wholly-owned subsidiary of Dover Corporation.

RevC Aug2021

DEFINING | WHAT'S NEXT