

# FITTING INSTRUCTIONS

## FL90, FL100, FL120, FL180 and FL760





Issue: 10/08/2011

P L E A S E   H A N D   T O   S I T E   O P E R A T O R

### W A R N I N G

Care must be taken not to twist the frames. Please check the cover to frame interface prior to concreting. It is recommended that the cover is placed into the frame during concreting to eliminate any frame distortion. The underside of the frame must be fully supported in concrete.

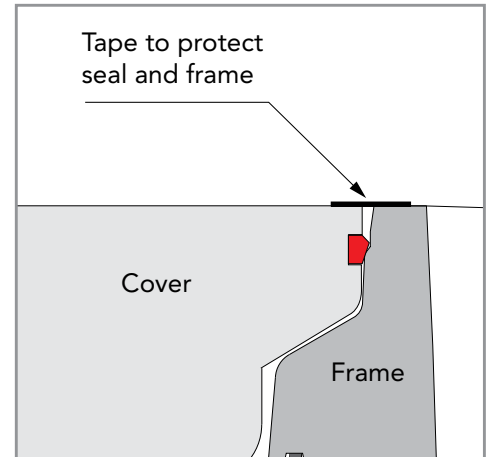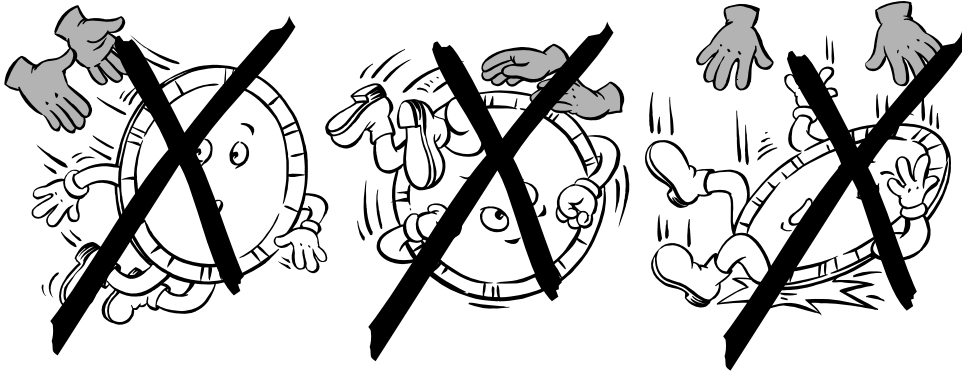


It is recommended that during concreting, the cover be positioned into the frame and the gap between the cover and frame be sealed with tape to protect the cover seal and frame.

## FITTING INSTRUCTIONS

### VERY IMPORTANT

To allow for drainage, Fibrelite recommends that the concrete be sloped away from the top outer edge of the frame (A) a minimum of  $\frac{1}{2}$ " over a 12" distance. Do not expose the top outer edge of the frame (A) – the concrete pad must be flush with the top outer edge of the frame.

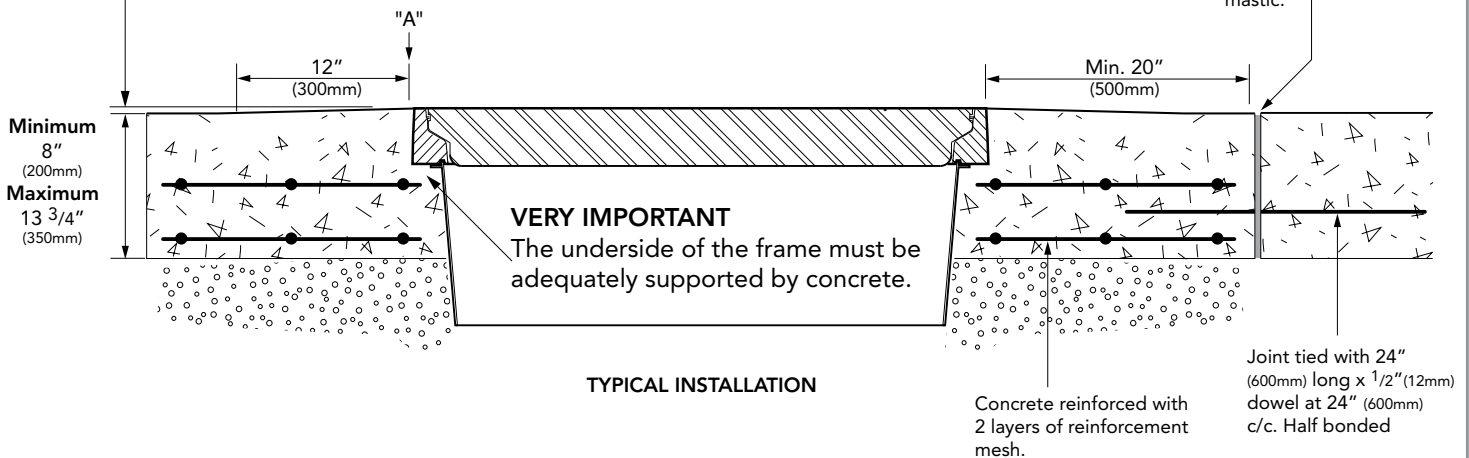

S h a p i n g   F u t u r e   S t a n d a r d s

100 Mechanic Street, Pawcatuck, CT 06379, USA, T: + 1 860 599 6081, F +1 860 599 1037 email: covers@fibrelitecorp.com