



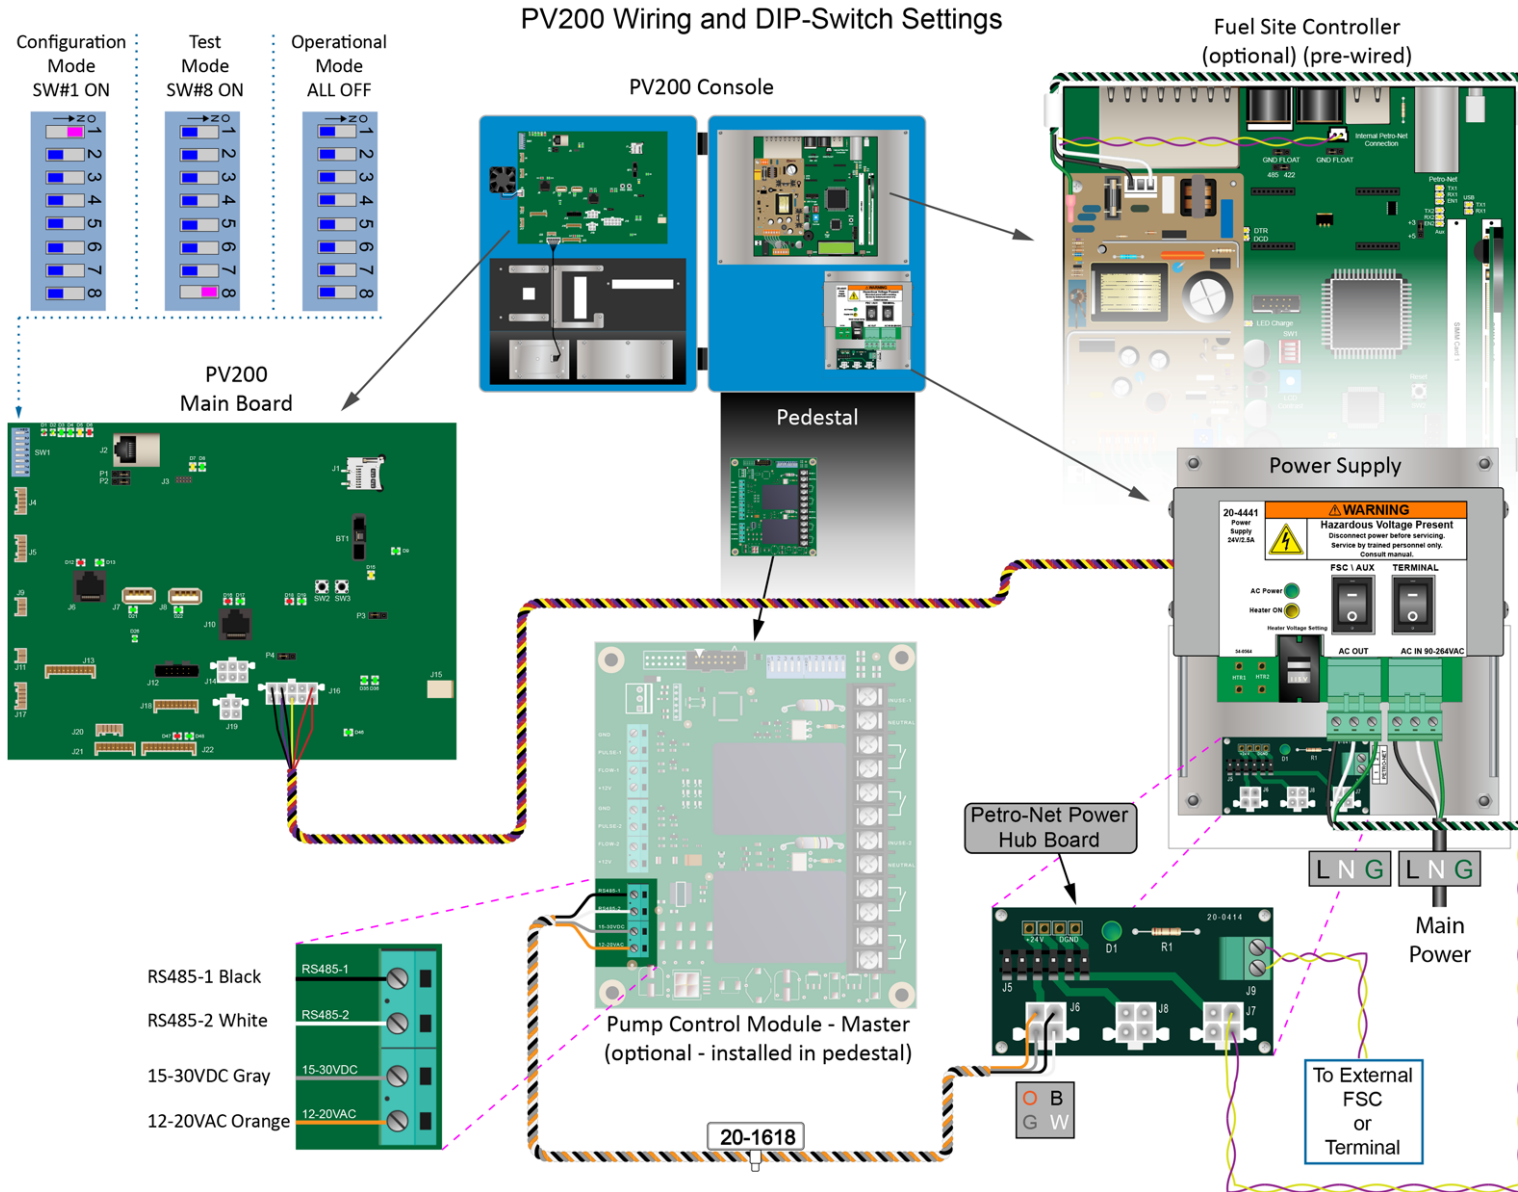


20-4445-YES Option - Printer Installation

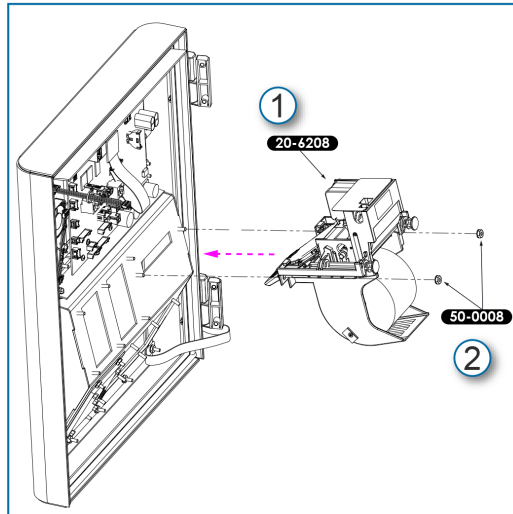

NOTICE: Make sure that the power supply is OFF before you install the printer to prevent damage to the unit and for general safety during the installation.

1. Put the printer unit onto the screw posts with the paper chute through the pocket slot.
2. Install and tighten the nuts (#8-32).

To download the complete M1010 PV200 IOM Guide, scan this QR code or go to:
https://www.opwglobal.com/docs/libraries/opw-fms/manuals/opw-fms-manuals/m1010-pv200-iom.pdf?sfvrsn=b63091c4_20

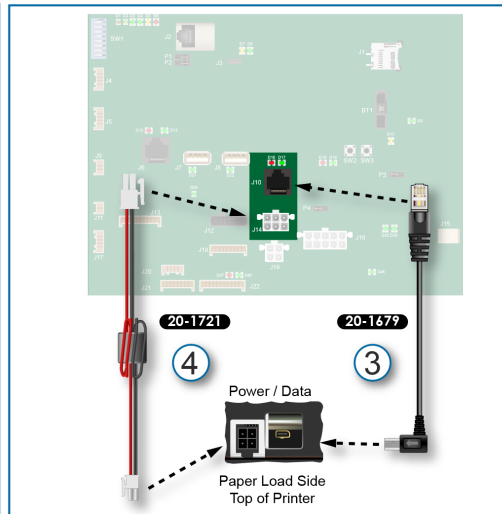


3. Install the Data Cable (20-1679).

- Verify that the Micro-RS232 end is connected to the data port on the top of the printer unit.
- Attach the RJ-45 connector end to the J10 Printer Comm port on the main board.

4. Install the Power Cable (20-1721).

- Verify that the small connector end of the cable is connected to the power cable port on the top of the printer unit.
- Attach the large 2x3 Pin Molex connector to the J14 Printer Power Port on the main board

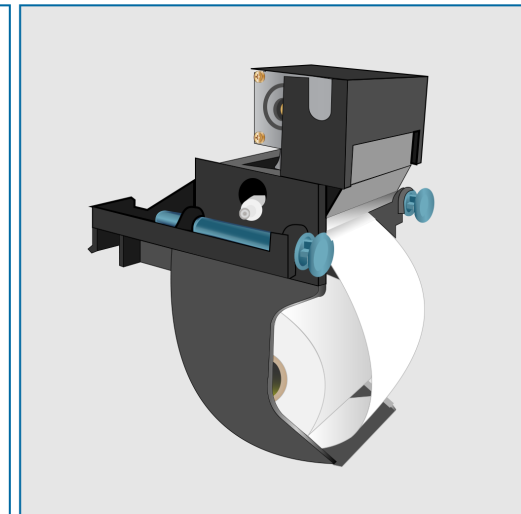

Load Paper

- Make sure the unit is turned on.
- Remove the roll of paper (54-1107) from its protective material.
- Put the roll of paper in the paper tray.
- Feed the paper into the printer through the paper guide slots. The sensor in the paper guide will sense the paper and start the printer to automatically load the receipt paper.
- Pull out the extra paper in the chute to cut it off.