


Vapor recovery Swivel Limiter Kit Can be used on Vac Assist, or Balanced

Parts Included

- 2- Metal limit clips
- 2- Large clamps 1.9375 to 2.5 (3632 breeze)
- 2- Mid size clamps 1.4375 to 2.0 (3624 breeze)
- 2- Small clamps .9375 to 1.5 (3616 breeze)

Installation

- Install the clip on the large nut portion of the hose end swivel
- Use the clamp that fits the nut securely without excess
- Attach a clamp of the proper size to the hose collar portion of the swivel
- Adjust the clamps so the clip contacts the screw portion of the collar clamp to limit the rotation.

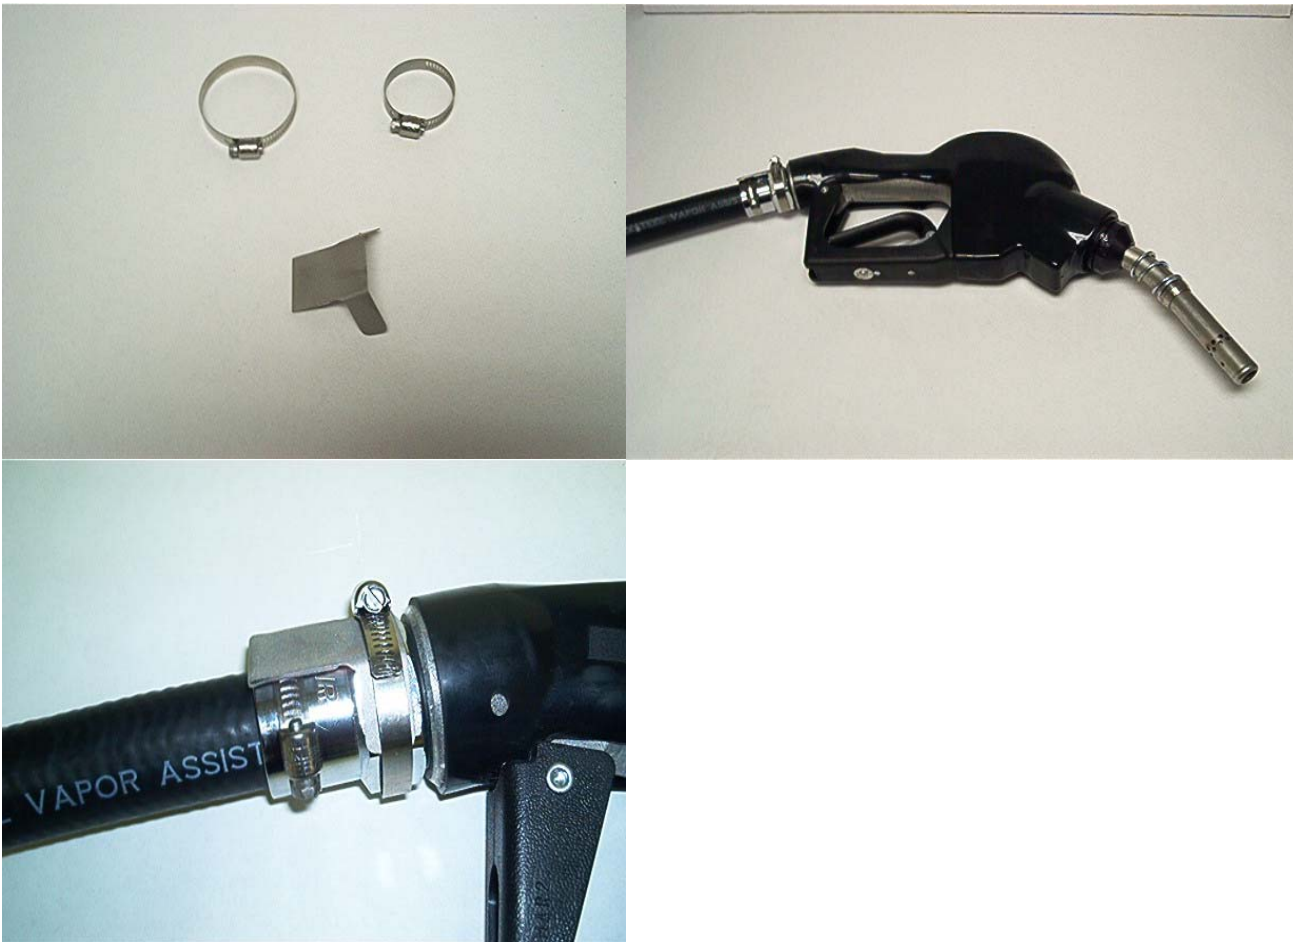

M00-20-4352
5/8/09